

Troubleshooting

Engine Will Not Start	P. 85
Tire Puncture	P. 86
Electrical Trouble	P. 92
Battery Goes Dead	P. 92
Burned-out Light Bulb.....	P. 92
Blown Fuse	P. 95