


Starter Motor Operates But Engine Does Not Start

Check the following items:

- Make sure engine stop switch is in the  (Run) position. ➔ P. 20
- Check the correct engine starting sequence. ➔ P. 23
- Check that there is gasoline in the fuel tank.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➔ P. 23
- Check for a blown fuse. ➔ P. 95
- Check for a loose battery connection (➔ P. 50) or battery terminal corrosion (➔ P. 41).
- Check the condition of the battery. ➔ P. 92

If the problem continues, have your motorcycle inspected by your dealer.