


# Refueling

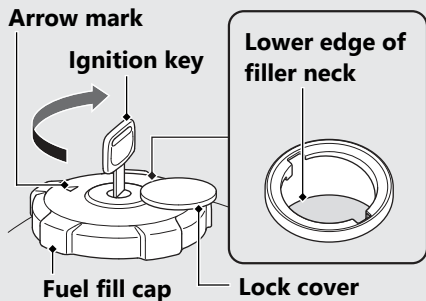

Do not fill with fuel above the lower edge of the filler neck.

**Fuel type:** Unleaded gasoline only

**Recommended fuel octane number:**  
Pump Octane Number (PON) 86 or higher.

**Tank capacity including the reserve:**  
2.77 US gal (10.5 L)

**Reserve capacity:** 0.61 US gal (2.3 L)

The tank should be refilled as soon as possible after switching to reserve, and the fuel valve should be returned to the ON position after refueling to avoid running out of fuel with no reserve. ➔P.22

## Refueling and Fuel Guidelines ➔P.12

### Opening the Fuel Fill Cap

- 1 Open the lock cover, insert the ignition key, and turn it clockwise.
- 2 Turn the fuel fill cap counterclockwise and remove it.

### Closing the Fuel Fill Cap

- 1 Install and tighten the fuel fill cap firmly by turning it clockwise until the arrow mark on the cap faces forward.
- 2 Turn the ignition key counterclockwise.
- 3 Remove the ignition key and close the lock cover.