


## Seat

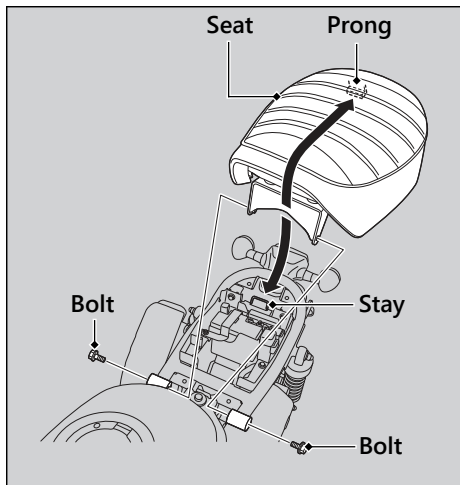

### Removal

1. Remove the bolts.
2. Pull the seat up and backward.

### Installation

1. Insert the prong into the stay on the frame.
2. Push forward and down on the rear of the seat until it locks in place.
3. Install and tighten the bolts.
  - Make sure that the seat is locked securely in position to pull it up lightly.