



<ENGINE>

FUEL LINES

Check the fuel lines for deterioration, damage or leakage. Replace if necessary.



FUEL LINES

THROTTLE OPERATION

Check for smooth throttle grip full opening and automatic full closing in all steering positions. Check the throttle cable and replace it if it is deteriorated, kinked or damaged.

Lubricate the throttle cable (page 2-7) if throttle operation is not smooth.

Measure throttle grip free play at the throttle grip flange.

FREE PLAY: 2-6 mm (1/8-1/4 in)



Adjustment can be made at either end of the throttle cable.

Minor adjustments are made with the upper adjuster.

Adjust by loosening the lock nut and turning the adjuster. Tighten the lock nut.

Major adjustments are made at the lower adjuster on the carburetor after removing the front cover.

Remove the carburetor rubber cap.
Turn the adjuster to obtain the specified free play.

Recheck the throttle operation.

