




## FLOAT LEVEL

Remove the float chamber.

Measure the float level with the float tip just contacting the float valve.

**FLOAT LEVEL: 10.7 mm (0.42 in)**

Replace the float, if the float level is not within specification.

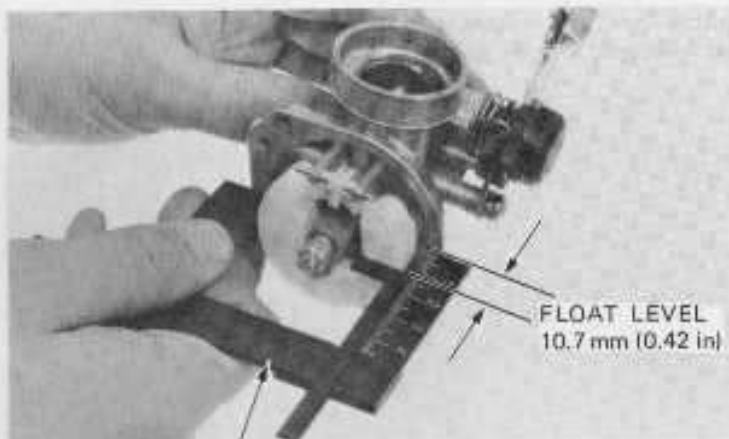

FLOAT LEVEL GAUGE  
07401-0010000

FLOAT LEVEL  
10.7 mm (0.42 in)


## THROTTLE VALVE ASSEMBLY

Install the clip on the jet needle.

Install the jet needle into the throttle valve and clamp it with the needle clip retainer.

### NOTE

Install the needle clip retainer so it rests on the throttle valve bottom.

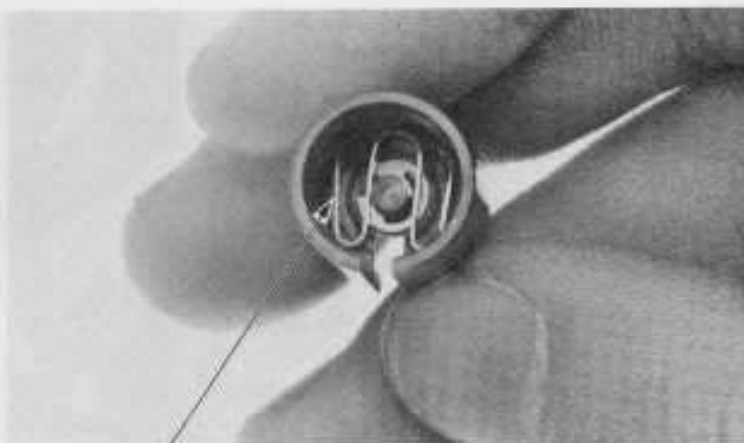

NEEDLE CLIP  
RETAINER

THROTTLE VALVE  
SPRING

Compress the throttle valve spring and install the cable into the valve.



CABLE END