



Remove the clutch damper springs.

Place a wood block under the drive plate.

Remove the 5 mm screws, loosening 2-3 turns at a time while pushing down on the clutch outer.




CLUTCH SPRING INSPECTION

Measure the spring free length.

STANDARD: 25.08 mm (0.987 in)

SERVICE LIMIT: 23.1 mm (0.91 in)

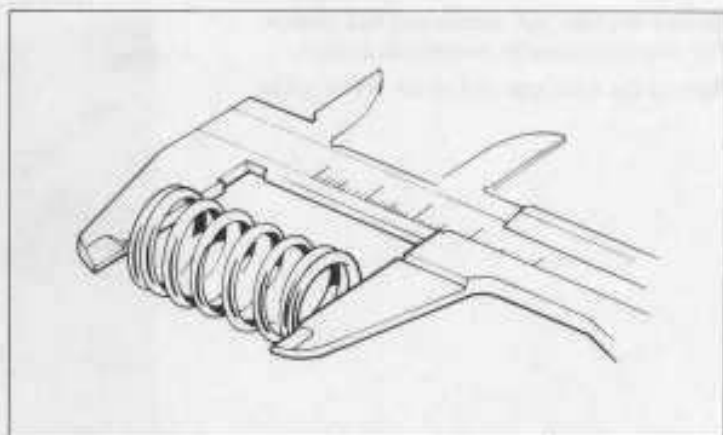

CLUTCH DISC INSPECTION

Replace the clutch discs if they show signs of scoring or discoloration.

Measure the disc thickness.

STANDARD:

DISC A: 2.55–2.65 mm (0.100–0.104 in)

DISC B: 3.35–3.45 mm (0.139–0.136 in)

SERVICE LIMIT: DISC A: 2.3 mm (0.09 in)

DISC B: 3.0 mm (0.12 in)

