



SERVICE INFORMATION	12-1	HANDLEBAR	12-5
TROUBLESHOOTING	12-2	FRONT WHEEL	12-8
HEADLIGHT	12-3	FRONT SHOCK ABSORBER	12-12
INSTRUMENTS	12-3	FRONT FORK/STEERING STEM	12-16

SERVICE INFORMATION

GENERAL INSTRUCTIONS

- A jack or other support is required to support the motorcycle.
- Route all cables and wires properly (page 1-6).

TOOLS

Special

Pin spanner

07902-0010000

Ball race remover

17946-1790000 – M9310-277-91774, U.S.A. only

Common

Bearing driver handle A

07749-0010000 – 07949-6110000

Bearing driver outer, 32 x 35 mm

07746-0010100 } – 07946-9370100

Bearing driver pilot, 10 mm

07746-0040100

Lock nut wrench, 26 x 30 mm

07716-0020202

Extension bar, 1/2 in drive x 3 in (75 mm)

07716-0020500 – commercially available

TORQUE VALUES

Steering stem nut

6.0 – 9.0 kg-m (43 – 65 ft-lb)

Handlebar setting nut

2.0 – 3.0 kg-m (14 – 22 ft-lb)

Steering lock

0.6 – 1.3 kg-m (4 – 10 ft-lb)

Front axle nut

3.0 – 4.0 kg-m (22 – 29 ft-lb)

Front suspension pivot bolt

1.0 – 2.0 kg-m (7 – 14 ft-lb)

Front suspension stopper bolt

2.0 – 3.0 kg-m (14 – 22 ft-lb)

Front shock absorber upper bolt

2.5 – 3.5 kg-m (18 – 25 ft-lb)