


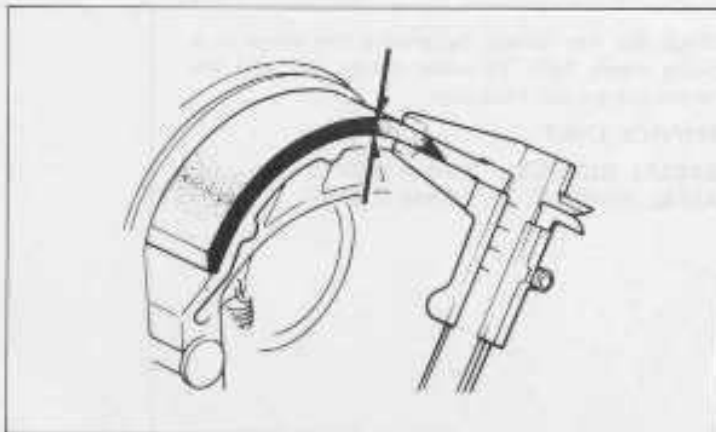

BRAKE LINING THICKNESS INSPECTION

Measure the brake lining thickness.


SERVICE LIMIT: 2.0 mm (0.08 in)



BRAKE SHOE REPLACEMENT

Remove the brake arm and indicator plate.

Remove the brake shoes and brake cam.

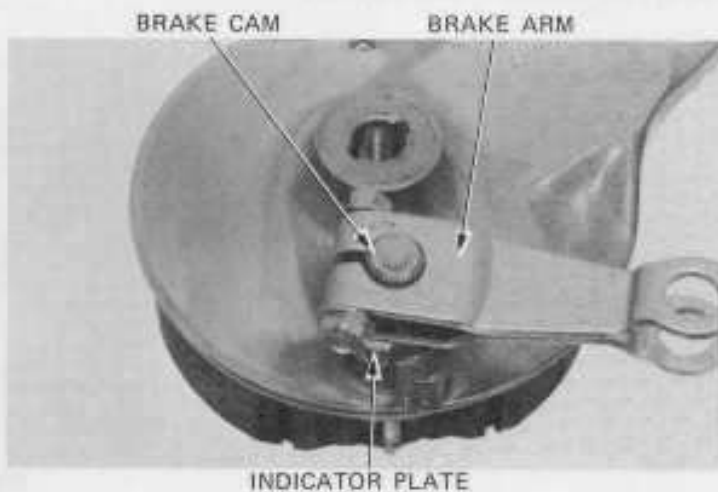

Apply grease to the sliding surface of the brake cam.
Install the brake shoes and shoe springs.

WARNING

*Contaminated brake linings reduce stopping power.
Keep grease off the linings.*

