



STARTER MOTOR


REMOVAL

WARNING

With the ignition switch OFF, remove the battery negative cable at the frame before servicing the starter motor.

Remove the left crankcase cover.

Remove the starter drive sprocket snap ring.

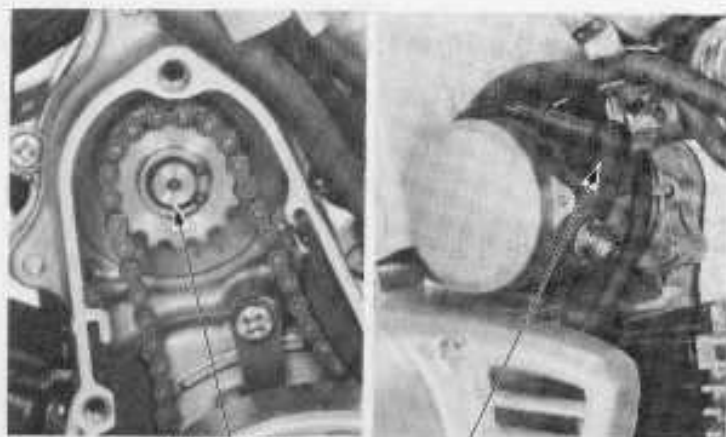

SNAP RING

STARTER CABLE

Disconnect the starter cable at the starter motor.

Remove the three starter motor mounting bolts.

Remove the starter motor.

