




## STARTER RELAY

### INSPECTION

Depress the starter switch button with the ignition ON.


The coil is normal if the starter relay switch clicks.

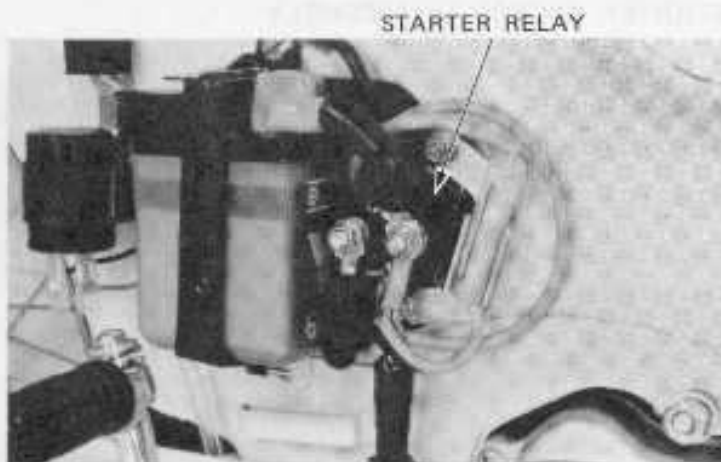

Connect an ohmmeter to the starter relay switch cable terminals.

Connect a 6V battery to the switch wire leads.

The switch is normal if there is continuity.

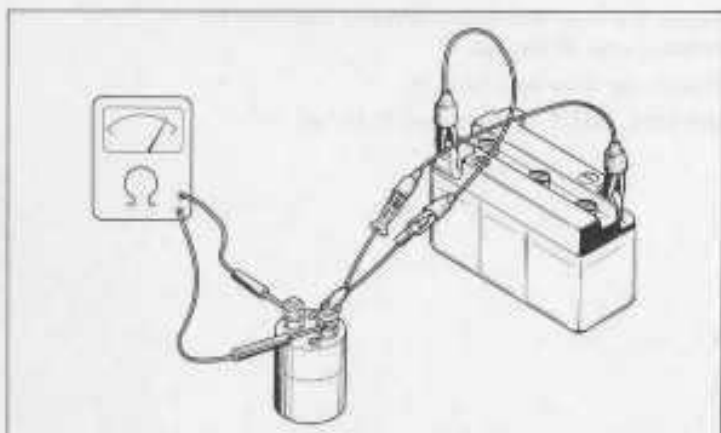

## STARTER CLUTCH/DRIVE CHAIN

### REMOVAL

Remove the A.C. generator rotor (Section 14).

Remove the starter chain guide and protector.

Remove the sprocket setting plate.

Remove the snap ring.

Remove the starter chain and sprockets.

