



A.C. GENERATOR

INSPECTION

Remove the front cover.

Disconnect the A.C. generator coupler.

Measure the resistance between the terminals.

RESISTANCE:

White-Green: 0.3-0.6 Ohms

Yellow-Green: 0.2-0.6 Ohms

Replace the stator assembly if either resistance is not within range.

REMOVAL

Remove the front cover.

Remove the gearshift pedal and the drive sprocket cover.

Disconnect the A.C. generator coupler.

Disconnect the neutral switch lead from the switch terminal and remove the left crankcase cover.

Remove the wire protector.

A.C. GENERATOR COUPLER



DRIVE SPROCKET COVER



GEARSHIFT PEDAL

LEFT CRANKCASE COVER

NEUTRAL SWITCH



WIRE PROTECTOR

WIRE LEAD