


Remove the left side cover.

Remove the relay box attaching nut and bolt.

Remove the relay box.

Remove the ignition coil mounting nut and remove the ignition coil.

IGNITION COIL NUT

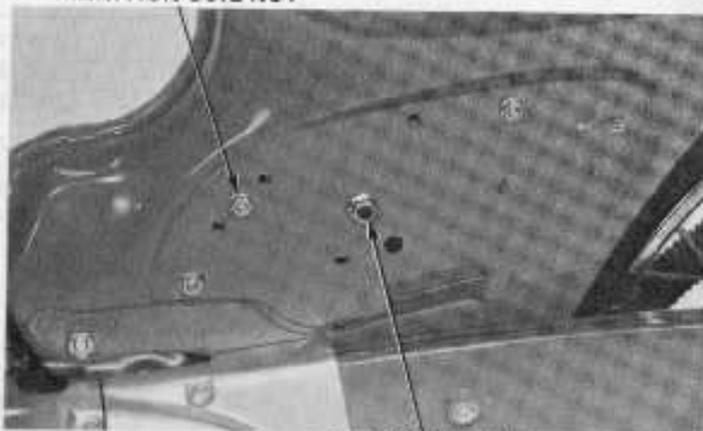


RELAY BOX NUT

INSPECTION

Measure the resistance of the primary and secondary coil.

PRIMARY: 0.2–0.3 Ohm
SECONDARY: 3.4–4.2 K ohm

Replace either coil if its resistance does not fall within the range.

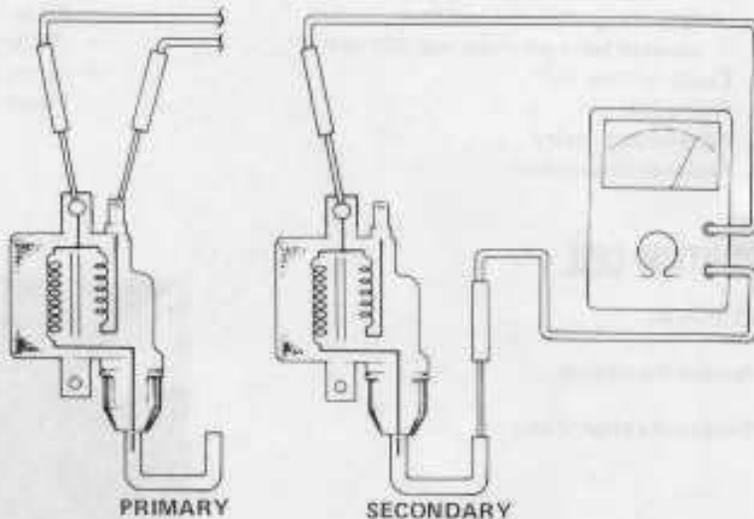

PRIMARY

SECONDARY

CDI UNIT

REMOVAL

Remove the battery and battery box.

Remove the CDI unit.

CDI UNIT

