



Fig. 4.42 Removing fuel tank ① Fuel tank



Fig. 4.43 Removing tank side cover
① Fuel tank ② Tank side cover

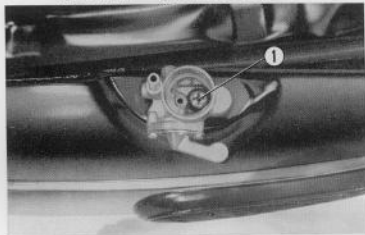


Fig. 4.44 Removing fuel cock
① Fuel cock mounting screw



Fig. 4.45 Removing fuel tank
① Fuel tank mounting bolt ② Fuel tank

3. Withdraw the fuel tank ① from the rear, raising it slightly. (Fig. 4.42)

4. To remove the tank side cover ②, remove the two screws on the emblem and then unscrew the side cover bolt. Slide the cover forward to remove. (Fig. 4.43)

5. The fuel cock can be removed by first unscrewing the fuel strainer cap, removing the filter screw and then the cross pin fuel cock mounting screw. ① (Fig. 4.44)

(C 90, CT 90)

1. Turn off the fuel cock, disconnect the fuel line and drain the fuel from the tank.
2. Unscrew the tank mounting bolts ① located at both side of the tank and lift off the tank. (Fig. 4.45)

C. Inspection

1. Flush the inside of the tank to remove any scales or other foreign matter.
2. Make sure that there are no leaks in the tank.