

MAINTENANCE SCHEDULE

The maintenance intervals shown in the following schedule are based upon average riding conditions. Machines subjected to severe use, or ridden in unusually dusty areas, require more frequent servicing.

Items marked with* should be serviced by an

authorized Honda dealer, unless the owner has proper tools and is mechanically proficient.

Other maintenance items are simple to perform and may be serviced by the owner.

<p style="text-align: center;">INITIAL SERVICE PERIOD</p> <p style="text-align: center;">FIRST WEEK OF OPERATION</p>	<ul style="list-style-type: none"> ● ENGINE OIL—Change. ● *CONTACT POINTS AND IGNITION TIMING—Clean, check, and adjust or replace if necessary. ● *VALVE TAPPET CLEARANCE—Check and adjust if necessary. ● *CARBURETOR—Check and adjust if necessary. ● THROTTLE OPERATION—Inspect cable. Check and adjust free play. ● *CLUTCH—Check operation and adjust if necessary. 	<ul style="list-style-type: none"> ● DRIVE CHAIN—Check, lubricate, and adjust if necessary. ● BRAKE CONTROL LINKAGE—Check linkage and adjust if necessary. ● TIRES—Inspect and check air pressure. ● ALL NUTS, BOLTS, AND OTHER FASTENERS—Check security and tighten if necessary. ● *WHEELS, RIMS, AND SPOKES—Check. Tighten spokes and true wheels if necessary.
<p style="text-align: center;">EVERY 30 OPERATING DAYS</p> <p style="text-align: center;">NOTE Change oil every 30 operating days or every 3 months, whichever occurs first.</p>	<ul style="list-style-type: none"> ● ENGINE OIL—Change. ● SPARK PLUG—Clean and adjust gap, or replace if necessary. ● *CONTACT POINTS AND IGNITION TIMING—Clean, check, and adjust or replace if necessary. ● *VALVE TAPPET CLEARANCE—Check and adjust if necessary. ● POLYURETHANE FOAM AIR FILTER ELEMENT—Clean and oil. Service more frequently if operated in dusty areas. ● *CARBURETOR—Check and adjust if necessary. ● *WHEELS, RIMS, AND SPOKES—Check. Tighten spokes and tire wheels if necessary. 	<ul style="list-style-type: none"> ● *CAM CHAIN TENSION—Adjust (only initial service). ● THROTTLE OPERATION—Inspect cable. Check and adjust free play. ● *CLUTCH—Check operation and adjust if necessary. ● DRIVE CHAIN—Check, lubricate, and adjust if necessary. ● BRAKE CONTROL LINKAGE—Check linkage and adjust if necessary. ● TIRES—Inspect and check air pressure. ● ALL NUTS, BOLTS, AND OTHER FASTENERS—Check security and tighten if necessary.
<p style="text-align: center;">EVERY YEAR</p>	<ul style="list-style-type: none"> ● FUEL FILTER SCREEN—Clean. ● FUEL LINE—Check. ● FRONT FORK OIL—Drain and refill. ● *OIL FILTER SCREEN—Clean. ● *CENTRIFUGAL OIL FILTER—Clean. ● *FRONT AND REAR SUSPENSION—Check operation. ● *STEERING HEAD BEARINGS—Adjust. ● *BRAKE SHOES—Inspect and replace if worn. ● *CAM CHAIN TENSION—Adjust. 	