

Fig. 12 ① Oil level gauge

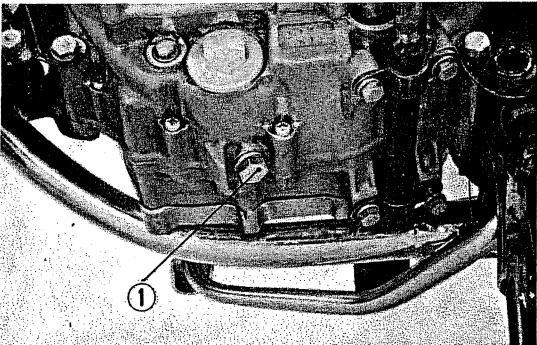


Fig. 13 ① Drain plug

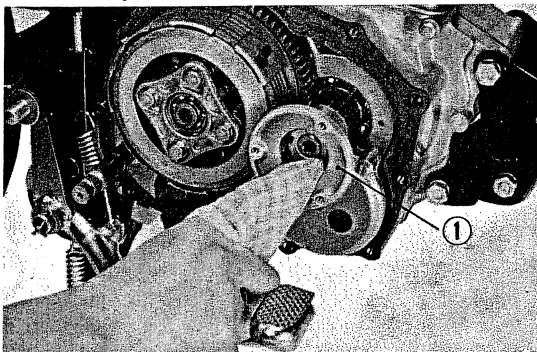


Fig. 14 ① Oil filter

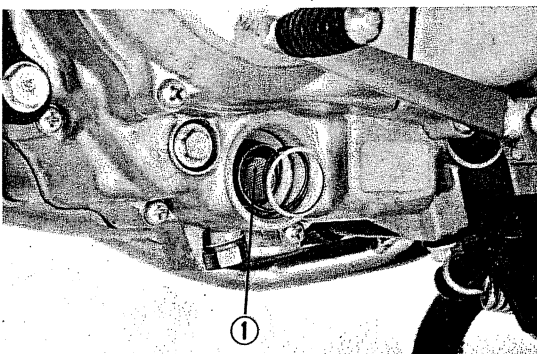


Fig. 15 ① Oil pump screen

6. ENGINE OIL CHANGE

The oil change is better performed while the engine is warm as this will expedite thorough draining of oil.

- 1) Remove the oil cap and remove the drain plug to drain oil. (Fig. 13)
- 2) When the oil is thoroughly drained, replace the drain plug.

Fill with a brand name oil SAE 10W-30, in the quantity of 1 lit. (1.05 qt.). Check the level by placing the dip stick in its hole, but not screwing it in. In this position, the level should be within the upper and lower marks. (Fig. 12)

7. OIL FILTER CLEANING

- 1) Remove the muffler.
- 2) Remove the step bar.
- 3) Remove the right crankcase cover.
- 4) Remove the centrifugal oil filter cap and clean inside. (Fig. 14)

Oil Pump Screen Cleaning

Whenever the right crankcase cover is removed, check the oil pump screen to see if dirt is trapped. If it is dirty, remove the screen by taking off the cap. Clean the screen by blowing compressed air through it. (Fig. 15)