

## 8. CAM CHAIN ADJUSTMENT

Perform the adjustment with the adjuster screw. Loosen the lock nut and turn the adjuster screw counter clockwise to decrease the slack in the cam chain. The procedure for adjustment is, first loosen the screw and then tighten until it becomes heavy. Tighten the lock nut after completing the adjustment. (Fig. 16)

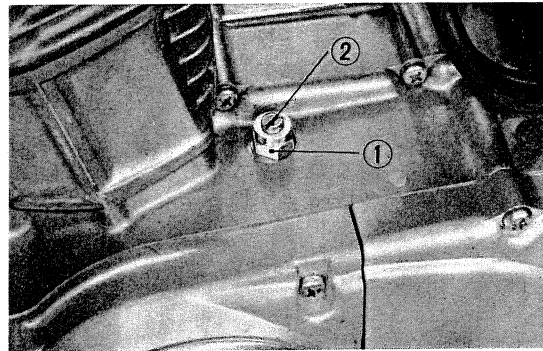


Fig. 16 ① Lock nut ② Adjuster screw

## 9. FUEL SYSTEM INSPECTION

Inspect the fuel tank, fuel cock, carburetor and fuel piping system for any fuel leaks. If fuel is spilled at any time during the replacement of fuel system component, it should be cleaned up immediately as it is a fire hazard.

## 10. AIR CLEANER ELEMENT SERVICING

- 1) Remove the right side cover.
- 2) Loosen air cleaner connecting clamp and the two mounting nuts to remove the air cleaner element. (Fig. 17)

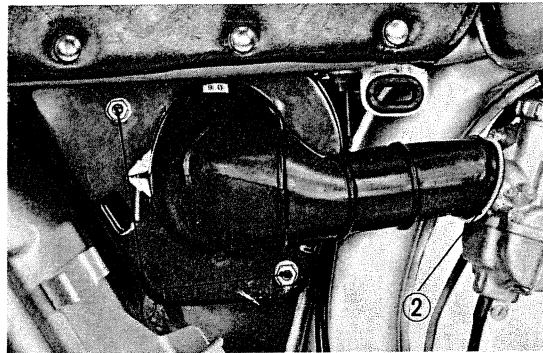


Fig. 17 ① Mounting nut ② Air cleaner connecting clamp

- 3) Wash the element in solvent and then allow to dry. Apply a small quantity of oil on the element before installation. (Fig. 18)

**Note:**

**Do not use gasoline to wash the filter element.**

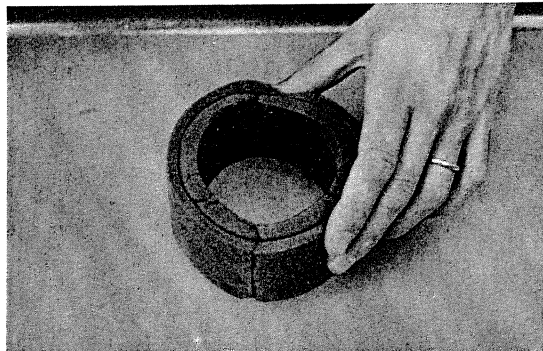


Fig. 18 ① Air cleaner element