

2. TRANSMISSION

The transmission used on TL 125 is essentially the same as those used on CB/CL/SL100 and CB/CD/SL 125S except for the gear arrangement on the main shaft and the resultant changes in the shift drum groove. (Fig. 33)

Disassembly, inspection and assembly procedures will not be shown here since these are identical to those of CB100. See pages 32 thru 35.

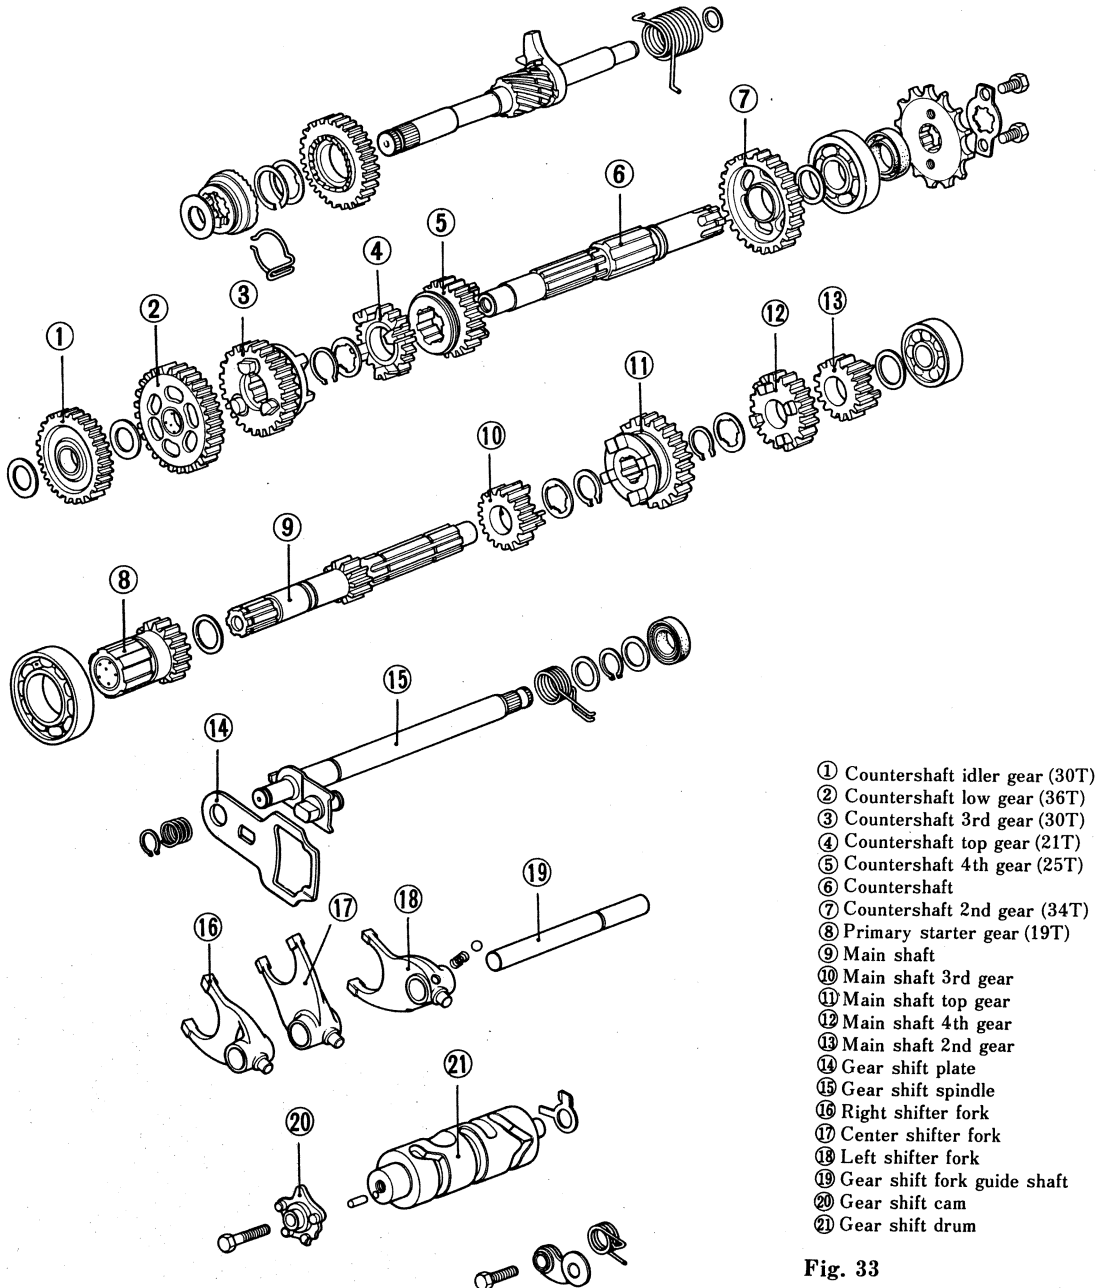


Fig. 33