



Apply clean engine oil to the new O-rings and install them onto the oil cooler hose joint flange.

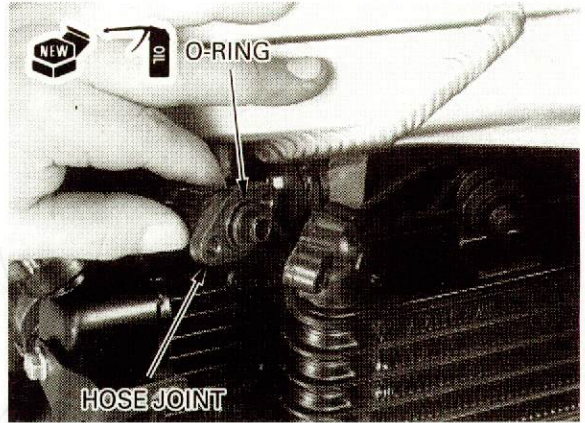

Install the oil hose joints to the oil cooler and tighten the bolts securely.

Fill the crankcase with recommended engine oil (page 3-16), and check for oil leaks. Install the radiator grill (page 2-4).

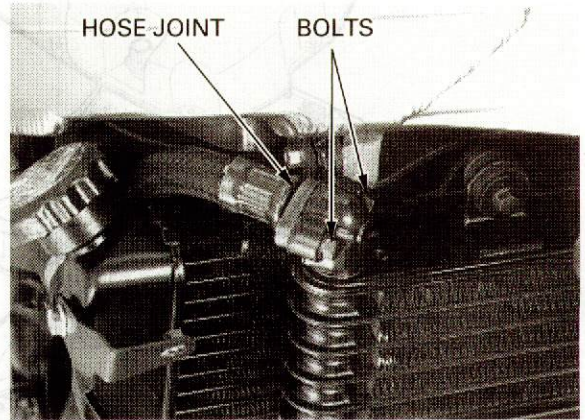

22 N·m (1.6 kgf-m) (16 lbf-ft)
18 N·m (1.3 kgf-m) (13 lbf-ft)

32 N·m (2.3 kgf-m) (23 lbf-ft)
3.5 lbf-ft

22 N·m (1.6 kgf-m) (16 lbf-ft)