

## INJECTOR

### INSPECTION

#### ▲WARNING

- If the engine must be running to do some work, make sure the area is well-ventilated. Never run the engine in an enclosed area.
- The exhaust contain poisonous carbon monoxide gas that may cause loss of consciousness and may lead to death.

Start the engine and let it idle. Confirm the injector operating sounds with a sounding rod or stethoscope.

If the injector does not operate, replace the injector.

### REMOVAL

Remove the throttle body (page 5-63).

Disconnect the MAP sensor vacuum tube. Remove the screw and MAP sensor.

Remove the nuts and fuel pipe assembly.

Remove the injectors from the throttle body.

