



Disconnect the lower radiator hose from the water pump cover.

Remove the following:


- Muffler/exhaust pipe (page 2-10)
- Oil pipes (page 4-12)

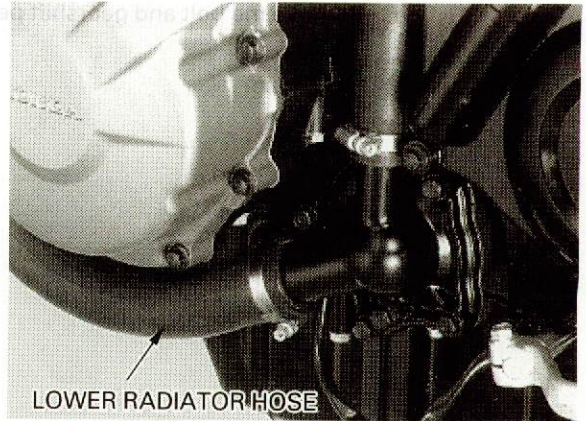

Remove the bolt and radiator lower bracket.

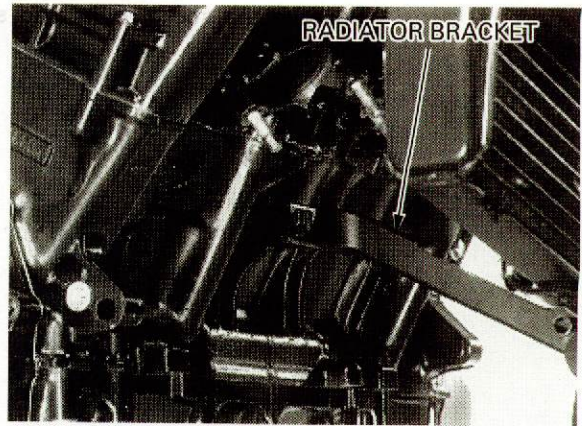

Remove the SH bolts, drive sprocket cover and guide plate.

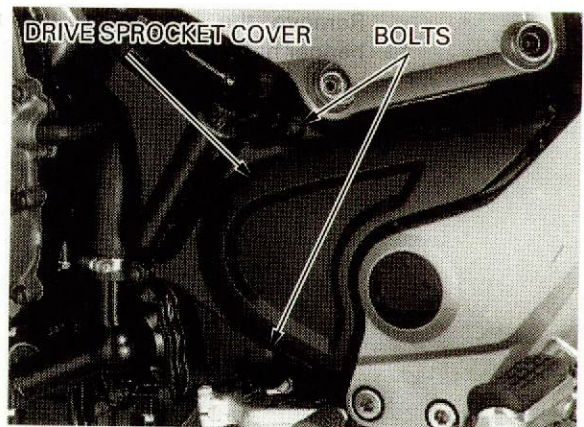

Loosen the rear axle nut and make the drive chain slack fully.
Shift the transmission into 5th gear and apply rear brake.
Remove the bolt, washer and drive sprocket.

