

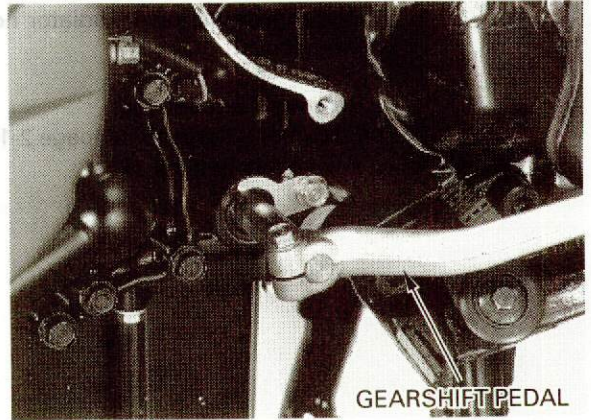
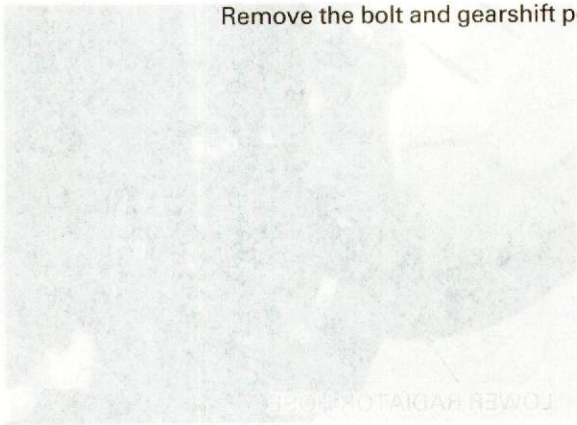


ENGINE REMOVAL/INSTALLATION



Remove the bolt and gearshift pedal.

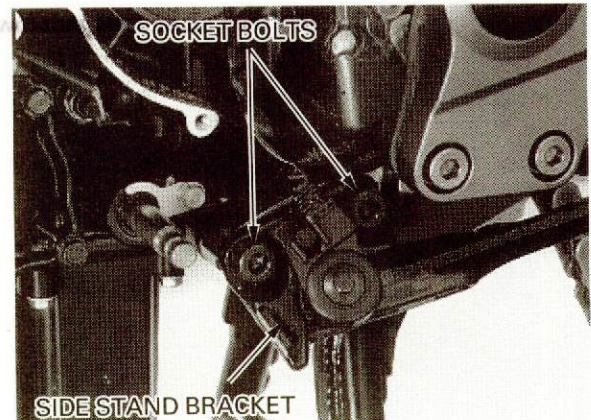

Remove the socket bolts and side stand bracket assembly.

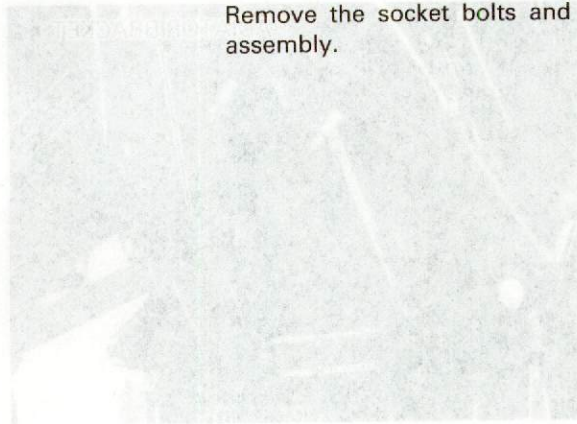

Remove the rear/upper and rear/lower engine hanger nuts.

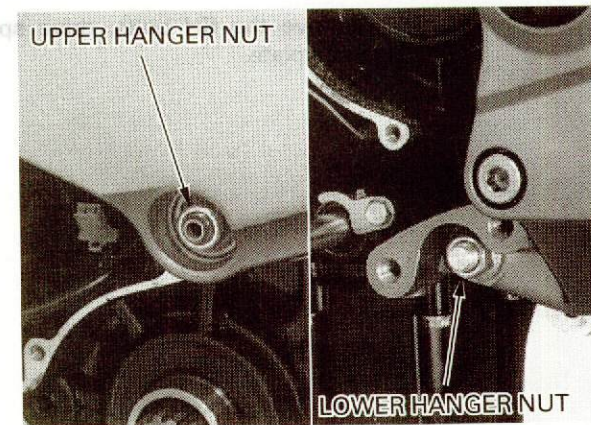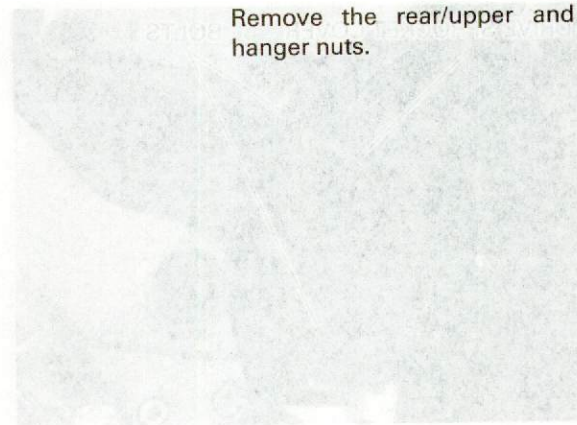

Loosen the rear/upper engine hanger adjusting bolt lock nut using the special tool.

TOOL:
Lock nut wrench

07VMA-MAT0100

