


# REAR WHEEL/SUSPENSION

## Wheel bearing removal


Install the bearing remover head into the bearing. From the opposite side install the bearing remover shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.

### TOOLS:

Bearing remover head, 20 mm 07746-0050600  
 Bearing remover shaft 07746-0050100

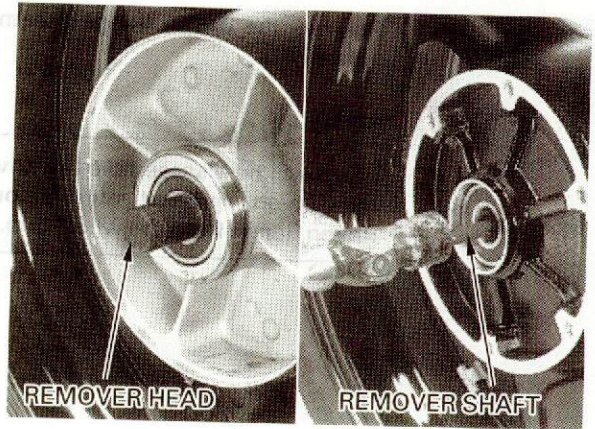

## ASSEMBLY

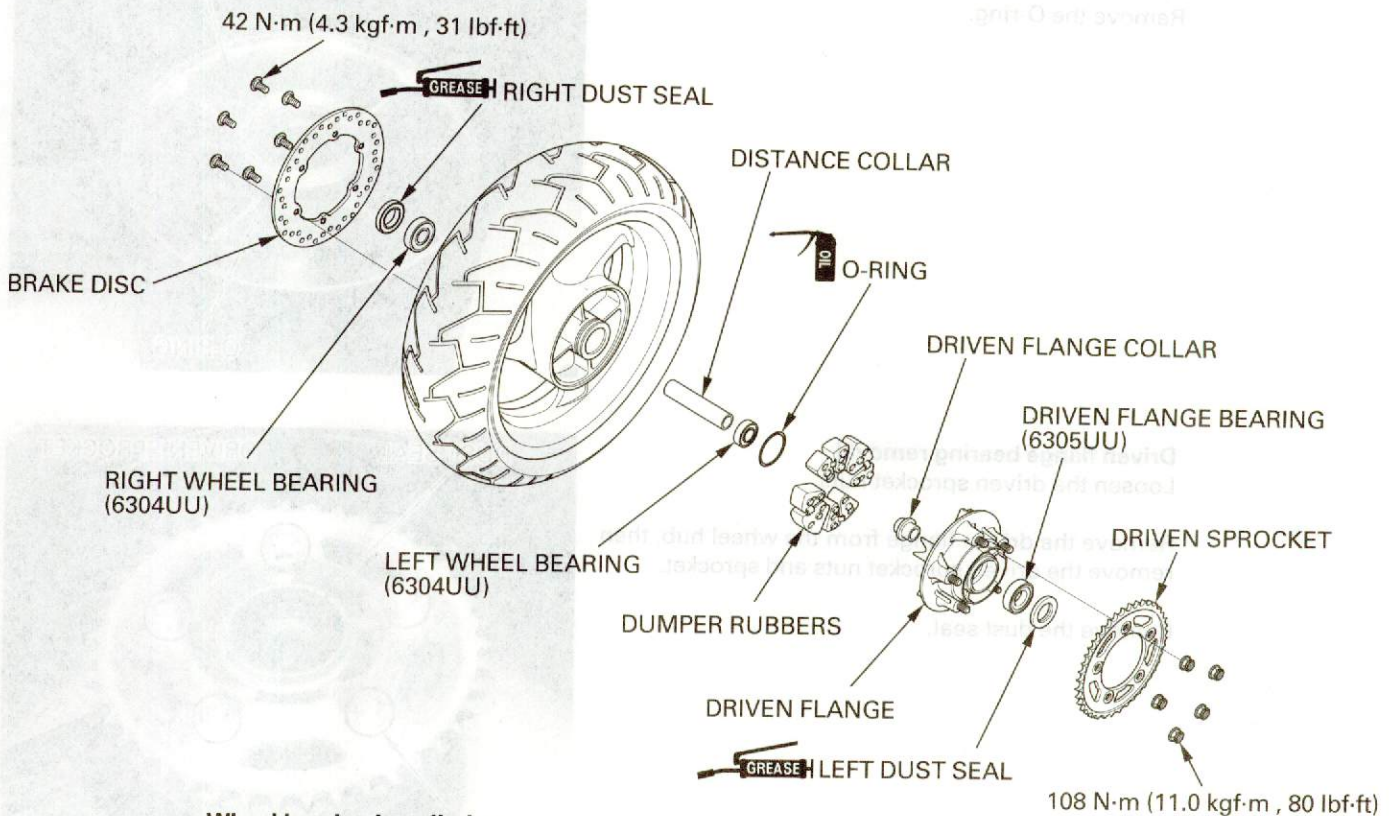

Wheel bearing installation

### CAUTION:

*Never install the old bearings, once the bearings has been removed, the bearing must be replaced with new ones.*

Drive in a new right bearing squarely. Install the distance collar, then drive in the left side bearing.

### TOOLS:

Driver 07749-0010000  
 Attachment, 52 × 55 mm 07746-0010400  
 Pilot, 20 mm 07746-0040500

