

## SEAT REMOVAL/INSTALLATION

Insert the ignition key into the seat lock/helmet holder and turn the key clockwise and push down the lever; release the seat locking.


Pushing the seat as shown, remove the seat rearward.

Align the seat hooks with the frame hooks and push the seat forward.

Press the rear of the seat down and lock the seat securely.

### CAUTION

- Apply grease to the seat locking.
- Be careful not to pinch the wire harness between the seat and the frame.

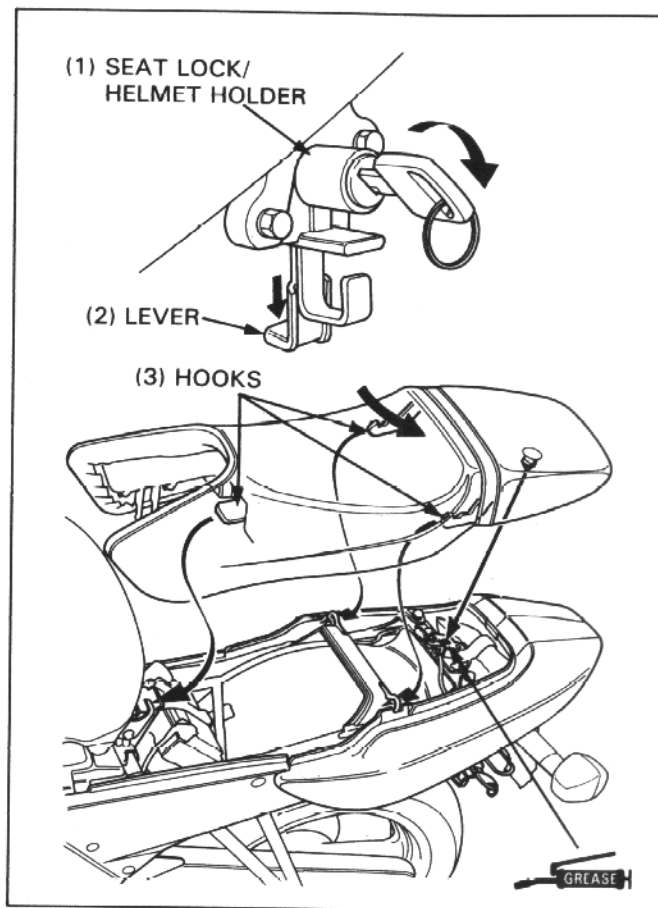

## REAR FAIRING REMOVAL/ INSTALLATION

Remove the seat (above).

Remove the bolts and collars.

Release the fairing front bosses from the grommets.

Remove the rear fairing rearward.

Install the rear fairing in the reverse order of removal.

