

# SERVICE ACCESS GUIDE

- The following shows the locations of the maintenance items listed below and the parts required to be removed for that maintenance service. Refer to the Common Service Manual for items not instructed in this manual.
  - Refer to section 2 (Frame/Body panels/Exhaust system), the parts required to be removed for service.
- For example: AIR CLEANER (Contamination, clogging, replacement) — maintenance parts (service item)  
 • Fuel tank — parts required to be removed for service

