



Air Cleaner
(Contamination, clogging, replacement page 3-5)
• Fuel tank

Synchronization Adjusting Screw
(Carburetor synchronization page 3-8)
• Fuel tank

Carburetor Choke (Operation)

PCV and AICV (Damage, faulty hose page 6-13)

Clutch lever (Free play)

Reserve Tank (Coolant level)

Headlight (Aim)

Steering Head
Bearings (Damage)

Valve Clearance
(page 3-5)

Suspension
(Loose, wear,
damage)

Suspension
(Loose, wear, damage)

Drive Chain
(Free play, lubrication, replacement)

ASV (Damage, faulty hose page 6-13)

Side Stand (page 3-8)

Spark Plug (Wear, damage, coloration)
• Front side cover

Fuel Filter (clogging)
Fuel Line (Damage, leakage)

Radiator Hose (Leakage, degradation, damage)

Engine Oil Drain Bolt (Oil replacement)

Throttle Stop Screw (Idle speed)