

REQUISITE SERVICE

- Engine oil draining (drain bolt location: page 3-3, step: section 2 of the Common Service Manual)

PROCEDURE		Q'ty	REMARKS
REMOVAL ORDER			
(1)	Clutch cable	1	<ul style="list-style-type: none"> • Installation is in the reverse order of removal. NOTE: <ul style="list-style-type: none"> • At installation, apply a locking agent to the two bolt threads. • Disconnect (or connect) the Alternator 3P connector.
(2)	Alternator wire connector	1	
(3)	Right crankcase cover bolt	14	
(4)	Right crankcase cover	1	
(5)	Gasket	1	
(6)	Dowel pin	2	
(7)	Clutch lifter pin	1	NOTE: <ul style="list-style-type: none"> • Drive in a new spring pin using a pin driver until the pin does not interfere with the lifter arm as shown.
(8)	Return spring	1	
(9)	Spring pin	1	
(10)	Clutch lifter arm	1	
(11)	Oil seal	1	
(12)	Crankshaft hole cap cover	1	
(13)	Crankshaft hole cap/O-ring	1/1	
(14)	Timing mark hole cap/O-ring	1/1	