

REQUISITE SERVICE

- Fork removal (page 11-6)

PROCEDURE	Q'ty	REMARKS
(1) Fork cap bolt	1	<p>⚠ WARNING</p> <ul style="list-style-type: none"> • The fork cap bolt is under high pressure. Use care when loosening the bolt.
(2) O-ring	1	
(3) Spacer	1	
(4) Spring seat	1	
(5) Fork spring	1	After removing, pour out any remaining fork oil.
(6) Dust seal	1	When removing them, do not damage the fork tube.
(7) Stopper ring	1	
(8) Fork socket bolt	1	<p>NOTE:</p> <ul style="list-style-type: none"> • Temporarily install the spring and fork cap bolt if difficulty is encountered in removing the socket bolt.
(9) Sealing washer	1	
(10) Fork piston	1	
(11) Fork piston ring	1	<p>NOTE:</p> <ul style="list-style-type: none"> • Do not remove it unless it is necessary to replace.
(12) Rebound spring	1	
(13) Fork tube	1	
(14) Oil seal	1	
(15) Back up ring	1	
(16) Slider bushing	1	
(17) Fork tube bushing	1	<p>NOTE:</p> <ul style="list-style-type: none"> • Do not remove it unless it is necessary to replace.
(18) Oil lock piece	1	
(19) Fork slider	1	