

FRONT WHEEL/SUSPENSION/STEERING

NOTE

- Clean all disassembled parts.

REQUISITE SERVICE

- Fork installation (page 11-6)

PROCEDURE		Q'ty	REMARKS
(1)	Fork slider	1	
(2)	Fork piston ring	1	Replace with a new one if it was removed from the piston.
(3)	Rebound spring	1	
(4)	Fork piston assembly	1	Insert into the fork tube (10).
(5)	Oil lock piece	1	Install onto the piston (4).
(6)	Fork tube bushing	1	Replace with a new one if it was removed from the fork tube.
(7)	Fork tube	1	
(8)	Sealing washer	1	
(9)	Fork socket bolt	1	NOTE: • Temporarily install the fork spring and fork cap bolt so that the piston is held in place when the socket bolt is tightened.
(10)	Slider bushing	1	
(11)	Back up ring	1	
(12)	Oil seal	1	NOTE: • Wrap vinyl tape around the fork tube top end to avoid damaging the oil seal during the oil seal installation. • Drive in it securely, using fork seal driver (07947—KA50100) and attachment (07947—KF00100).
(13)	Stopper ring	1	Install into the slider groove securely.
(14)	Dust seal	1	NOTE: • After installing it, compress the fork tube fully and pour the specified amount of fork fluid (page 1-11) into the fork tube.
(15)	Fork spring	1	NOTE: • Wipe oil off the spring thoroughly using a clean lint free cloth and install with tightly wound coil end facing down.
(16)	Spring seat	1	
(17)	Spacer	1	
(18)	O-ring	1	
(19)	Fork cap bolt	1	Tighten lightly, being careful not to cross-thread the bolt; after installing the fork into the steering stem, torque the bolt.