


REAR MASTER CYLINDER DISASSEMBLY/ASSEMBLY

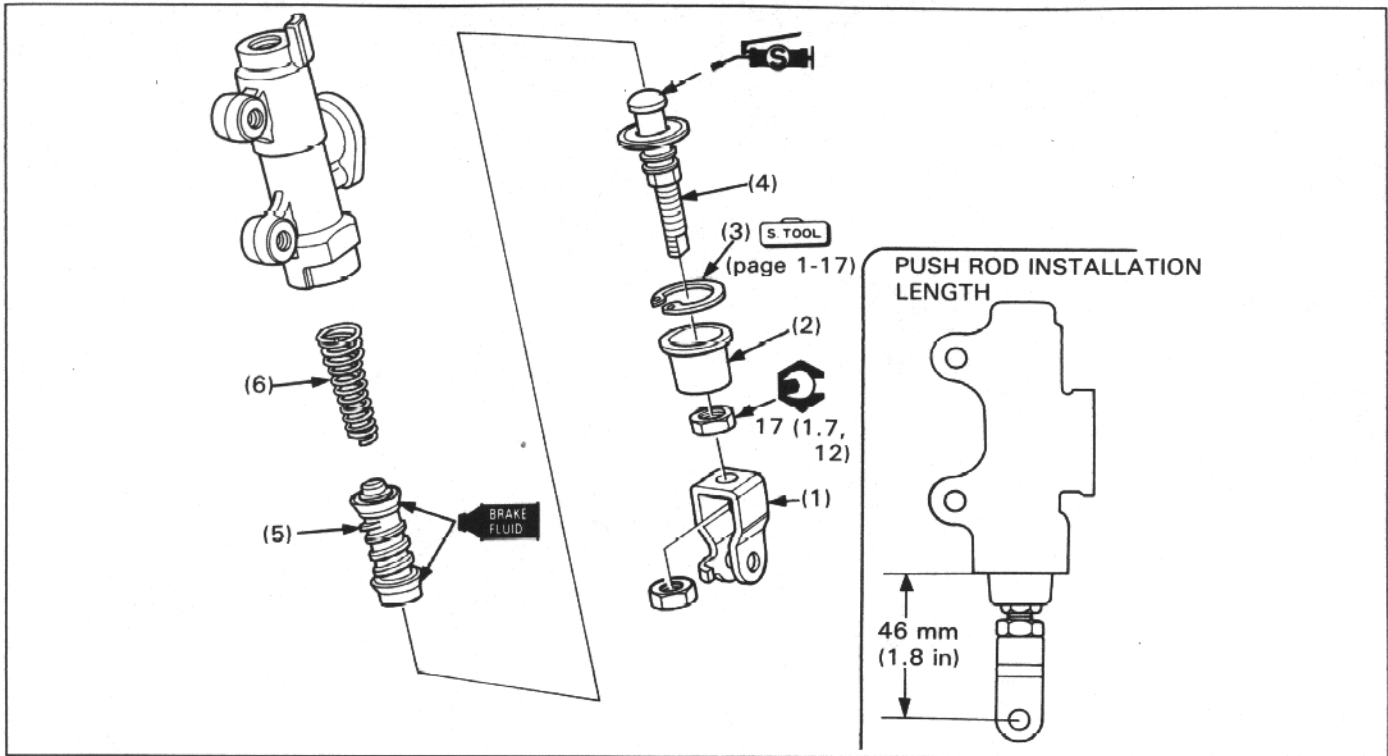

NOTE

- Replace the master piston, spring, cups, snap ring and boot as a set.
- The master cylinder piston, cups and spring must be installed as a set.

REQUISITE SERVICE

- Brake fluid replacement/air bleeding (section 17 of the Common Service Manual)
- Rear master cylinder removal/installation (page 13-9)

PROCEDURE		Q'ty	ASSEMBLY REMARKS
(1)	DISASSEMBLY ORDER Push rod joint	1	• Assembly is in the reverse order of disassembly. Adjust the joint installed length as shown. Face the joint tab side as shown.
(2)	Boot	1	CAUTION: • Be certain the snap ring is fully seated in the groove. Apply silicone grease to the rod head.
(3)	Snap ring	1	
(4)	Push rod	1	Install it with its small coil end toward the piston.
(5)	Master piston assembly	1	
(6)	Spring	1	