

16. ELECTRIC STARTER/STARTER CLUTCH

SERVICE INFORMATION	16-1	STARTER MOTOR DISASSEMBLY/ ASSEMBLY	16-6
SYSTEM LOCATION	16-2		
CIRCUIT DIAGRAM	16-2	STARTER CLUTCH REMOVAL/ INSTALLATION	16-8
TROUBLESHOOTING	16-3		
STARTER MOTOR REMOVAL/ INSTALLATION	16-5		

SERVICE INFORMATION

▲ WARNING

- Always turn the ignition switch OFF before servicing the starter motor. The motor could suddenly start, causing serious injury.

- A weak battery may be unable to turn the starter motor quickly enough, or supply adequate ignition current.
- If the current is kept flowing through the starter motor to turn it while the engine is not cranking over, the starter motor may be damaged.
- For the following component inspections, refer to the following pages; for the parts locations, see page 16-2 of this manual (SYSTEM LOCATION).

Clutch switch diode	Section 24 of the Common Service Manual.
Starter motor	Section 24 of the Common Service Manual.
Starter relay switch	Section 24 of the Common Service Manual ("A" circuit type).
Clutch switch	Section 25 of the Common Service Manual.
Neutral switch	Section 25 of the Common Service Manual.
Ignition switch	Check for continuity on the continuity chart of the WIRING DIAGRAM, page 18-1. Disconnect the switch connector inside the headlight case (page 1-19) and check it.
Side stand switch	(page 15-8)