

20. INDEX

Air Cleaner	3-5	Ignition Switch Removal/Installation	17-7
Case Removal/Installation	6-3	Ignition System	15-1
Alternator	14-7	Circuit Diagram	15-2
Brake Pedal Removal/Installation	13-12	Inspection	15-6
Brakes	13-1	Location	15-2
Cable and Harness Routing	1-19	Ignition Timing	15-9
Camshaft Removal/Installation	8-2	Left Handlebar Removal/Installation	11-3
Carburetor Combination	6-10	Lights/Meters/Switches	17-1
Disassembly/assembly	6-8	System Location	17-2
Removal/Installation	6-4	Lubrication and Seal Points	1-18
Separation	6-6	Lubrication System	4-1
Synchronization	3-8	Diagram	4-2
Charging System/Alternator	14-1	Maintenance	3-1
Circuit Diagram	14-2	Schedule	3-4
Inspection	14-4	Meter disassembly/assembly	17-6
Location	14-2	Removal/Installation	17-5
Clutch Installation	9-8	Model Identification	1-3
Removal	9-4	Oil Pump disassembly/assembly	4-4
Clutch/Gearshift Linkage	9-1	Removal/Installation	4-3
Coolant Draining	5-3	Pulse Generator	15-8
Cooling System	5-1	Radiator disassembly/assembly	5-6
Flow Pattern	5-2	Removal/Installation	5-5
Crankcase Installation	10-12	Rear Brake Caliper disassembly/assembly	13-7
Separation	10-2	Removal/Installation	13-5
Crankshaft Bearing Replacement	10-6	Pad Replacement	13-3
Crankshaft/Connecting Rod Removal/ Installation	10-4	Rear Fairing Removal/Installation	2-2
Crankshaft/Transmission	10-1	Rear Master Cylinder disassembly/assembly	13-11
Cylinder Head disassembly/assembly	8-6	Removal/Installation	13-9
Removal/Installation	8-4	Rear Wheel disassembly/assembly	12-3
Cylinder Head/Cylinder/Piston	8-1	Removal/Installation	12-2
Cylinder/Piston Removal/Installation	8-8	Rear Wheel/Suspension	12-1
Electric Starter Circuit diagram	16-2	Regulator/rectifier	14-5
System Location	16-2	Reserve Tank Removal/Installation	5-3
Electric Starter/Starter Clutch	16-1	Right Crankcase Cover Removal/Installation	9-2
Emission Control Information Labels (U.S.A. only)	1-28	Right Handlebar Removal/Installation	11-2
Systems	1-25	Seat Removal/Installation	2-2
Systems (California Model Only)	6-13	Service Access Guide	3-2
Engine Removal/Installation	7-1, 2	Service Information Brakes	13-1
Exhaust System Removal/Installation	2-3	Charging System/Alternator	14-1
Fork Assembly	11-10	Clutch/Gearshift Linkage	9-1
Disassembly	11-8	Cooling System	5-1
Removal/Installation	11-6	Crankshaft/Transmission	10-1
Frame/Body Panels/Exhaust System	2-1	Cylinder Head/Cylinder/Piston	8-1
Front Brake Caliper disassembly/assembly	13-6	Electric Starter/Starter Clutch	16-1
Removal/Installation	13-4	Engine Removal/Installation	7-1
Pad Replacement	13-2	Frame/Body Panels/Exhaust System	2-1
Front Master Cylinder disassembly/assembly	13-10	Front wheel/Suspension/Steering	11-1
Removal/Installation	13-8	Fuel System	6-1
Front Wheel disassembly/assembly	11-5	Ignition System	15-1
Removal/Installation	11-4	Lights/Meters/Switches	17-1
Front Wheel/Suspension/Steering	11-1	Lubrication System	4-1
Fuel Pump/Filter	6-13	Maintenance	3-1
Fuel System	6-1	Rear Wheel/Suspension	12-1
Fuel Tank Removal/Installation	2-4	Shock Absorber disassembly/assembly	12-5
Gearshift Linkage Removal/Installation	9-6	Removal/Installation	12-4
General Information	1-1	Side Cover Removal/Installation	2-3
General Safety	1-1	Side Stand	3-8
Headlight Removal/Installation	17-3	Switch	15-8
Ignition Coil	15-6	Spark Plug	3-5
		Specifications	1-4
		Starter Clutch Removal/Installation	16-8