

INDEX

Starter Motor disassembly/assembly	16-6
Removal/Installation	16-5
Steering Stem Removal/Installation	11-12
Swingarm disassembly/assembly	12-8
Removal/Installation	12-7
Tachometer Inspection	17-7
Taillight	17-4
Thermostat Removal/Installation	5-4
Tools	1-16
Torque Values	1-14
Transmission disassembly/assembly	10-10
Removal/Installation	10-8
Troubleshooting	19-1
Brakes	13-1
Charging System/Alternator	14-3
Clutch/Gearshift Linkage	9-1
Cooling System	5-1
Crankshaft/Transmission	10-1
Cylinder Head/Cylinder/Piston	8-1
Electric Starter/Starter Clutch	16-3
Frame/Body Panels/Exhaust system	2-1
Front Wheel/Suspension/Steering	11-1
Fuel System	6-2
Ignition System	15-3
Lubrication System	4-1
Rear Wheel/Suspension	12-1
Turn Signal Light	17-4
Valve Clearance	3-5
Water Pump disassembly/assembly	5-7
Wiring Diagram	18-1