

SEAT

REMOVAL

Unlock the seat lock using the ignition key.

Remove the seat backward while releasing the seat hooks from the frame hooks.


INSTALLATION

Install the seat while aligning its hooks with the frame hooks.

Push the seat forward, lock it securely.

CAUTION:

- *Be careful not to damage the wire harness.*
- *After installation, make sure that the seat is installed properly by moving the seat.*

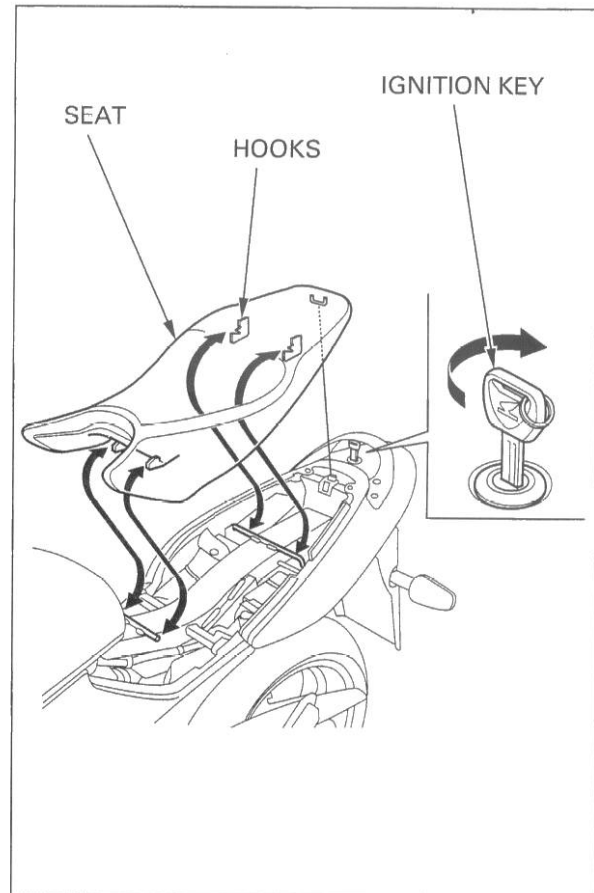

SIDE COVER

REMOVAL

Remove the seat (see above).

Remove the two side cover mounting screws.

NOTE:

The upper mounting bolt is screwed into the rubber nut. If the rubber nut is turn together with the mounting bolt, hold the rubber nut with your finger.

Release the rear tabs from the rear cowl grooves, then remove the side cover.

INSTALLATION

Install the side cover aligning its tabs with the grooves in the rear cowl.

Install and tighten the upper mounting screw to the specified torque.

TORQUE: 1 N·m (0.15 kgf·m , 1.1 lbf·ft)

Install and tighten the lower mounting screw to the specified torque.

TORQUE: 4 N·m (0.4 kgf·m , 2.9 lbf·ft)

