


CARBURETOR CHOKE

Check for smooth operation of the choke lever.
Lubricate the choke cable if the operation is not smooth.

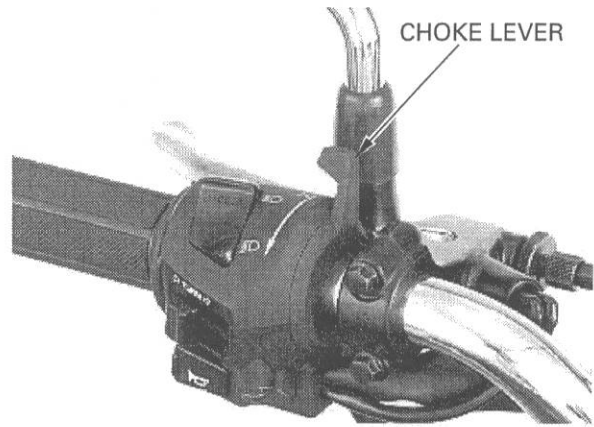

AIR CLEANER

Remove the left side cover (page 2-2).

Remove the three screws and air cleaner housing cover.



Remove and discard the air cleaner element in accordance with the maintenance schedule (page 3-3).

Also replace the air cleaner element any time it is excessively dirty or damaged.

Install the removed parts in the reverse order of removal.



SPARK PLUG

REMOVAL

Remove the radiator mounting bolts, then release the radiator from the grommet.

