

ENGINE OIL/OIL FILTER

OIL LEVEL INSPECTION

Start the engine and let it idle for 2–3 minutes.
Stop the engine and wait 3 minutes.

Remove the oil level dipstick and wipe the oil from the dipstick with a clean cloth.
With the motorcycle upright on level ground, insert the dipstick into the stick hole without screwing it in.
Remove the dipstick and check for the oil level.

If the level is below the lower line, fill the crankcase with recommended oil up to the upper level line.



RECOMMENDED ENGINE OIL:

HONDA 4-stroke oil or equivalent motor oil
API service classification: SE, SF or SG
Viscosity: 10W–40

NOTE:

Other viscosities shown in the chart may be used when the average temperature in your riding area is within the indicated range.

Reinstall the oil level dipstick.

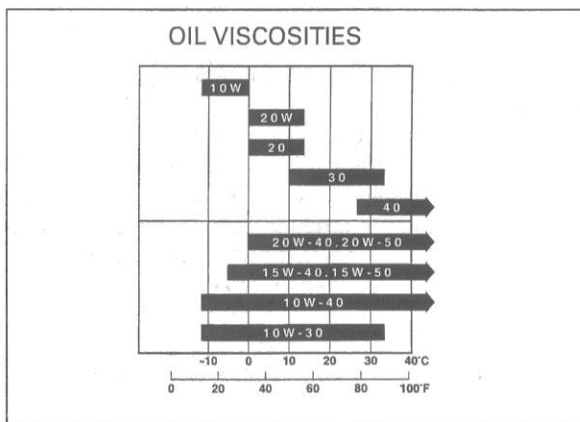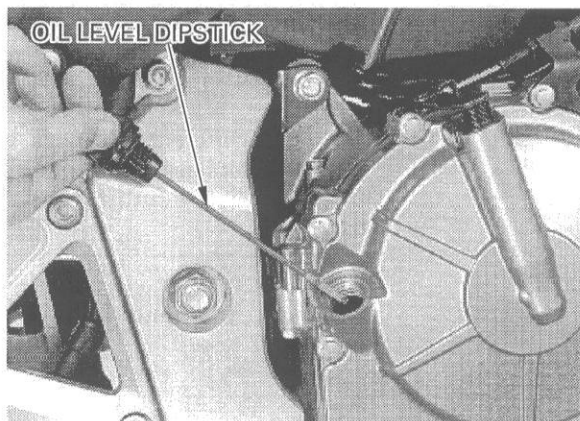

ENGINE OIL & FILTER CHANGE

▲WARNING

A warm-up engine and the oil in it are hot, be careful not to burn yourself.

NOTE:

Change the engine oil with the engine warm and the motorcycle on level ground to assure complete draining.

Remove the oil level dipstick.

Place a oil drain pan under the engine to catch the oil, then remove the oil drain bolt and sealing washer.

Drain the oil completely.

CAUTION:

Used engine oil may cause skin cancer if repeatedly left in contact with the skin for prolonged periods.

Although this is unlikely unless you handle used oil on a daily basis, it is still advisable to thoroughly wash your hands with soap and water as soon as possible after handling used oil.

