


CARBURETOR REMOVAL

▲WARNING


Gasoline is extremely flammable and is explosive under certain conditions. KEEP OUT OF REACH OF CHILDREN.

Remove the air cleaner housing (page 5-4).

Loosen the carburetor drain screws and catch the fuel with approved gasoline container.

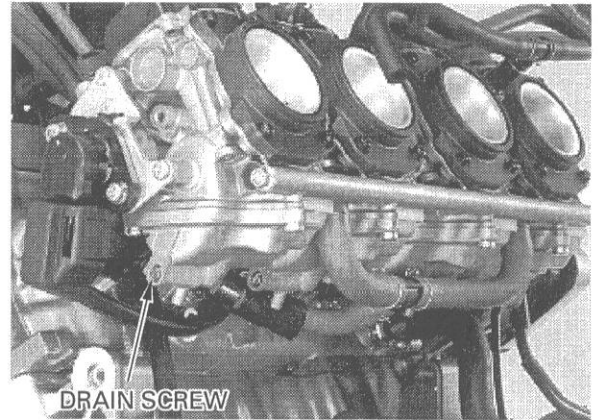


Remove the throttle sensor connector cover. Disconnect the throttle sensor 3P (Black) connector.

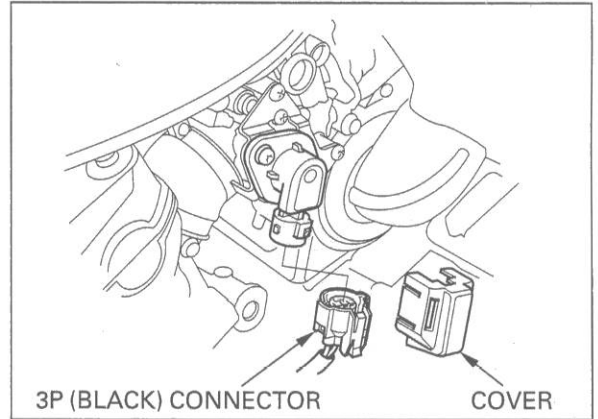

Loosen the carburetor side insulator band screws.

NOTE:

- After removing the carburetor assembly, do not place it up side down or the air intake might be deformed.
- Seal the cylinder head intake ports with a shop towel or cover it with piece of tape to prevent any foreign material from dropping into the engine.

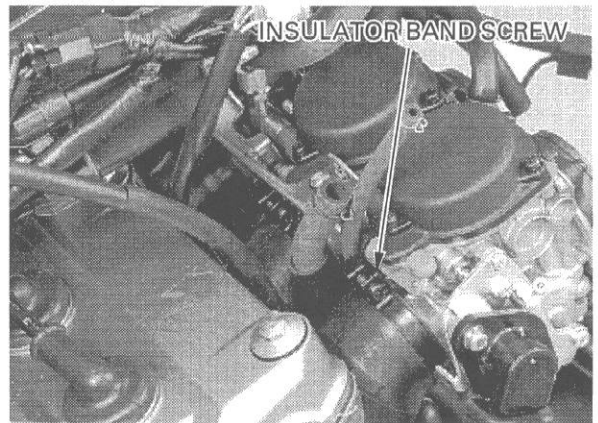

Remove the carburetor assembly. Disconnect the choke cable from the carburetor. Remove the throttle cables from the cable holder and disconnect the throttle cables from the throttle drum.

