



FUEL SYSTEM

Install the fuel valve into the fuel tank.
Tighten the fuel valve lock nut to the specified torque.

TORQUE: 34 N·m (3.5 kgf·m , 25 lbf·ft)

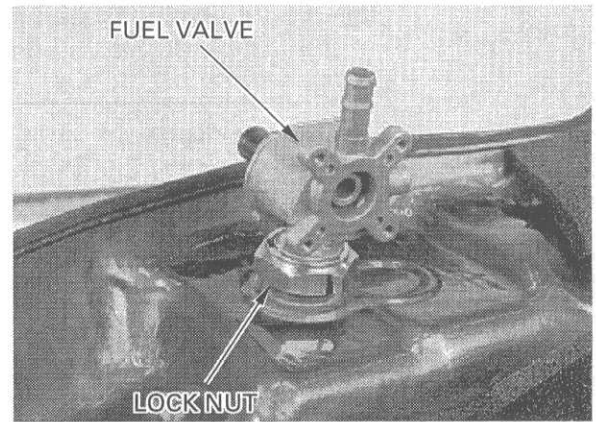

Install the diaphragm assembly, spring and diaphragm cover so that the air vent hole of the spacer and vacuum pipe of the cover facing to the same direction as the fuel pipe of the fuel valve body.

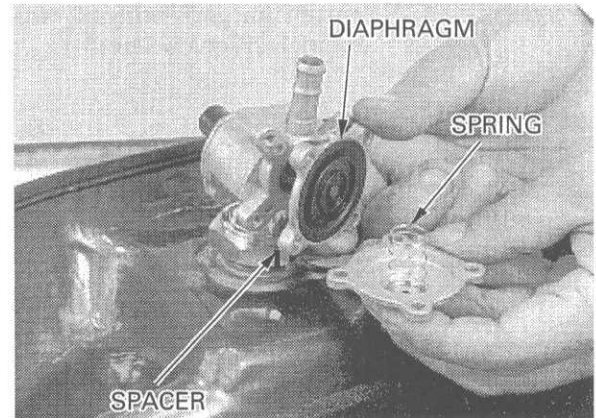

Install and tighten the screws.

Install the fuel tank (page 2-4).
Fill the fuel tank and make sure there are no fuel leaks.

