



Install the left pivot bracket, then tighten the bracket bolts.

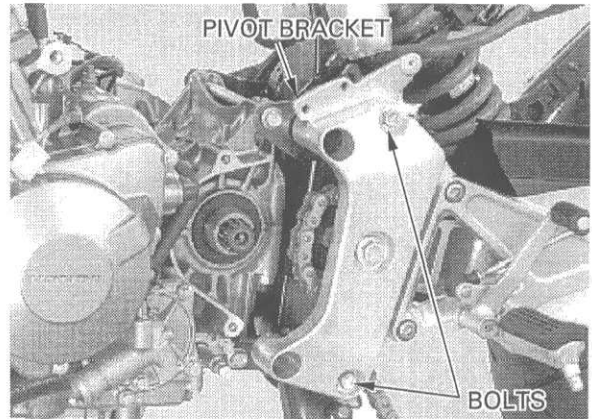


Install and tighten the swingarm pivot bolt to the specified torque.

TORQUE: 88 N·m (9.0 kgf·m , 65 lbf·ft)

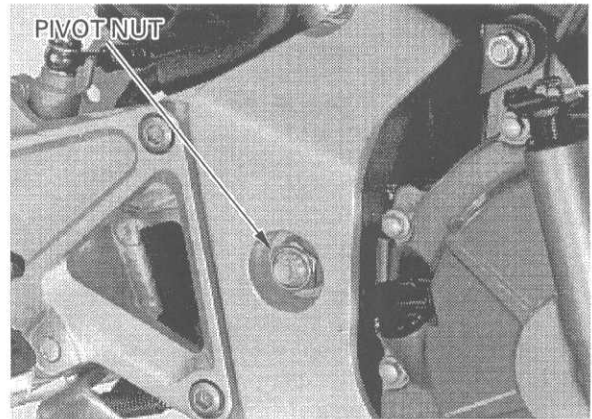

Install the front left engine hanger bolt/nut and distance collar.

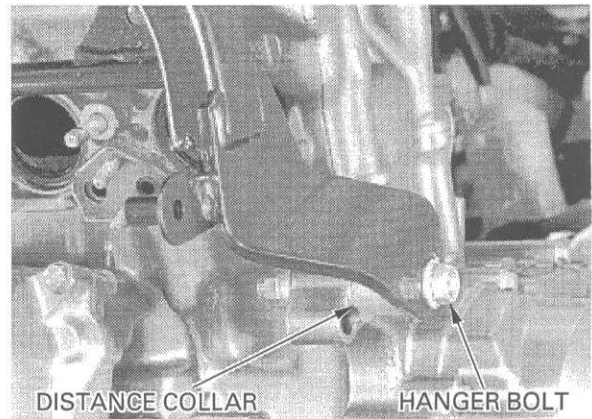

Install the front right engine hanger bracket and tighten the bolts to the specified torque.

TORQUE: 22 N·m (2.2 kgf·m , 16 lbf·ft)

Install the front right engine hanger bolt/nut and distance collar.

