


REAR WHEEL/SUSPENSION

Driven flange bearing removal

Remove the driven flange from the wheel hub, then remove the driven sprocket nuts and sprocket. Remove the dust seal.

Remove the driven flange collar.
Drive out the driven flange bearing.

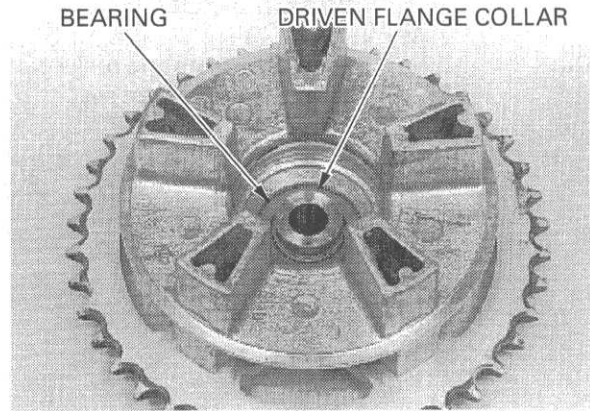


Wheel bearing removal

Always replace the bearings in pairs.

Install the bearing remover head into the bearing. From the opposite side install the bearing remover shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.

TOOLS:

- Bearing remover head, 17 mm 07746-0050500
- Bearing remover shaft 07746-0050100

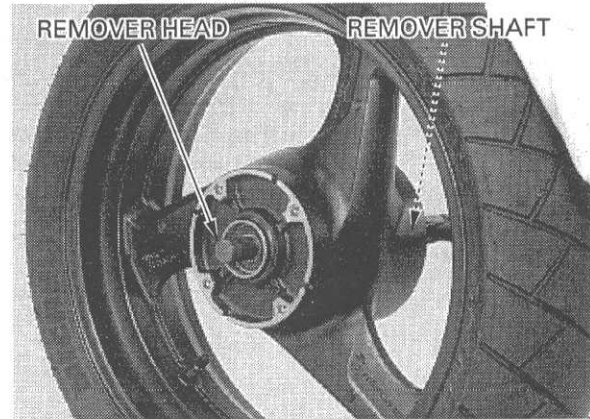

ASSEMBLY

