

Place the master cylinder assembly on the handlebar.

Align the end of the master cylinder with the punch mark on the handlebar.

Install the master cylinder holder with the "UP" mark facing up.

Tighten the upper bolt first, then the lower bolt.

Install the brake hose eyelet with the oil bolt and new sealing washers.

Push the brake hose against the stopper, tighten the oil bolt to the specified torque.

**TORQUE:** 34 N·m (3.5 kgf·m , 25 lbf·ft)

Connect the brake light switch wire connectors.

Install the brake lever assembly, tighten the pivot bolt.




**TORQUE:** 1 N·m (0.1 kgf·m , 0.7 lbf·ft)

Hold the pivot bolt and tighten the pivot nut.

**TORQUE:** 6 N·m (0.6 kgf·m , 4.3 lbf·ft)

Install the rearview mirror.

Fill the reservoir to the upper level and bleed the brake system (page 15-3).

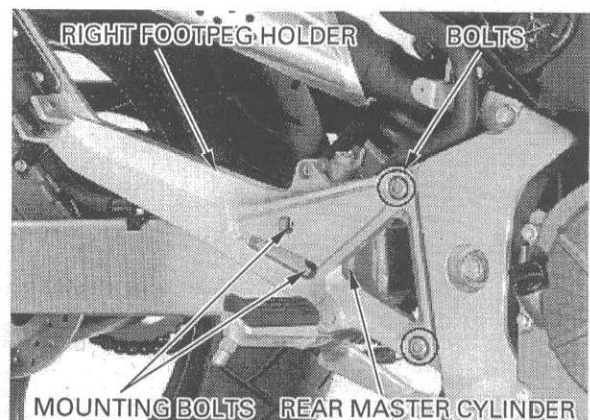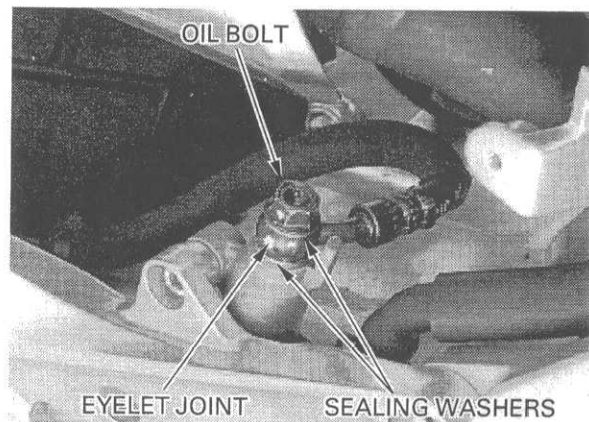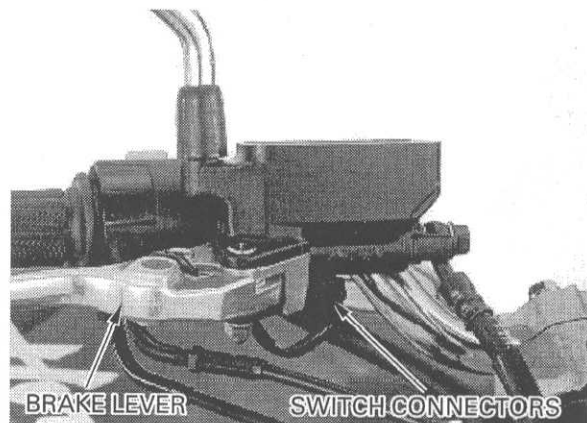

## REAR MASTER CYLINDER

### REMOVAL

Drain the rear hydraulic system (page 15-3).

Remove the brake hose oil bolt, sealing washers and brake hose eyelet joint.

#### CAUTION:

*Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.*

Loosen the rear master cylinder mounting bolts.

Remove the bolts and right footpeg holder.