

## INDEX

AIR CLEANER	3-5	FRONT FENDER	2-4
AIR CLEANER HOUSING	5-4	FRONT MASTER CYLINDER	15-9
ALTERNATOR COVER INSTALLATION	10-8	FRONT WHEEL	13-9
ALTERNATOR COVER REMOVAL	10-2	FUEL LINE	3-4
ALTERNATOR INSPECTION	16-8	FUEL TANK	2-4
BATTERY	16-5	FUEL VALVE	5-28
BODY PANEL LOCATIONS	2-0	GEARSHIFT LINKAGE	9-11
BRAKE FLUID	3-22	GENERAL SAFETY	1-1
BRAKE FLUID REPLACEMENT/AIR BLEEDING	15-4	HANDLEBAR SWITCHES	19-14
BRAKE LIGHT SWITCH	3-24	HANDLEBAR	13-3
BRAKE LIGHT SWITCH	19-15	HEADLIGHT	19-3
BRAKE PAD WEAR	3-23	HEADLIGHT AIM	3-24
BRAKE PAD/DISC	15-6	HORN	19-17
BRAKE PEDAL	15-24	IGNITION COIL	17-6
BRAKE SYSTEM	3-23	IGNITION CONTROL MODULE	17-11
CABLE & HARNESS ROUTING	1-22	IGNITION PULSE GENERATOR	17-6
CAM CHAIN TENSIONER LIFTER	8-25	IGNITION SYSTEM INSPECTION	17-4
CAMSHAFT INSTALLATION	8-20	IGNITION SWITCH	19-13
CAMSHAFT REMOVAL	8-8	IGNITION TIMING	17-12
CARBURETOR CHOKE	3-5	LUBRICATION SYSTEM DIAGRAM	4-0
CARBURETOR ASSEMBLY	5-15	LUBRICATION & SEAL POINTS	1-19
CARBURETOR COMBINATION	5-20	MAINTENANCE SCHEDULE	3-3
CARBURETOR DISASSEMBLY	5-11	MODEL IDENTIFICATION	1-3
CARBURETOR INSTALLATION	5-24	MUFFLER/EXHAUST PIPE	2-5
CARBURETOR REMOVAL	5-8	NEUTRAL SWITCH	19-15
CARBURETOR SEPARATION	5-9	NUTS, BOLTS, FASTENERS	3-27
CARBURETOR SYNCHRONIZATION	3-14	OIL COOLER	4-10
CHARGING SYSTEM INSPECTION	16-6	OIL PRESSURE SWITCH	19-12
CLUTCH	9-4	OIL PRESSURE INSPECTION	4-3
CLUTCH SYSTEM	3-25	OIL PUMP	4-6
CLUTCH SWITCH	19-15	OIL STRAINER/PRESSURE RELIEF VALVE	4-4
COOLANT REPLACEMENT	6-4	PILOT SCREW ADJUSTMENT	5-25
COOLANT TEMPERATURE GAUGE/SENSOR	19-10	PISTON/CONNECTING ROD	11-4
COOLING FAN MOTOR SWITCH	19-11	POSITION LIGHT	19-4
COOLING SYSTEM	3-16	RADIATOR	6-9
COMBINATION METER	19-5	RADIATOR COOLANT	3-16
CRANKCASE COMBINATION	11-11	RADIATOR RESERVE TANK	6-14
CRANKCASE SEPARATION	11-3	REAR BRAKE CALIPER	15-21
CRANKSHAFT	12-3	REAR COWL	2-3
CYLINDER COMPRESSION TEST	8-4	REAR FENDER	2-5
CYLINDER HEAD ASSEMBLY	8-17	REAR MASTER CYLINDER	15-13
CYLINDER HEAD COVER INSTALLATION	8-23	REAR WHEEL	14-3
CYLINDER HEAD COVER REMOVAL	8-4	REGULATOR/RECTIFIER	16-8
CYLINDER HEAD DISASSEMBLY	8-10	RIGHT CRANKCASE COVER INSTALLATION	9-14
CYLINDER HEAD INSPECTION	8-11	RIGHT CRANKCASE COVER REMOVAL	9-3
CYLINDER HEAD INSTALLATION	8-19	SEAT	2-2
CYLINDER HEAD REMOVAL	8-18	SERVICE RULES	1-2
DIODE	18-11	SECONDARY AIR SUPPLY SYSTEM	3-17
DRIVE CHAIN	3-17	SECONDARY AIR SUPPLY SYSTEM	5-26
DRIVE CHAIN SLIDER	3-22	SERVICE INFORMATION	
ENGINE IDLE SPEED	3-15	(ALTERNATOR/STARTER CLUTCH)	10-1
ENGINE INSTALLATION	7-6	(BATTERY/CHARGING SYSTEM)	16-1
ENGINE OIL/OIL FILTER	3-12	(CLUTCH/GEARSHIFT LINKAGE)	9-1
ENGINE REMOVAL	7-2	(COOLING SYSTEM)	6-1
EMISSION CONTROL SYSTEMS	1-32	(CRANKCASE/PISTON/CYLINDER)	11-1
FLYWHEEL INSTALLATION	10-7	(CRANKSHAFT/TRANSMISSION)	12-1
FLYWHEEL REMOVAL	10-4	(CYLINDER HEAD/VALVES)	8-1
FORK	13-16	(ELECTRIC STARTER)	18-1
FRONT BRAKE CALIPER	15-18	(ENGINE REMOVAL/INSTALLATION)	7-1