

Seat Removal/Installation

Removal

Insert the ignition key into the seat lock.
Turn the ignition key clockwise until it stops then remove the seat by sliding it backward.


Installation

Apply grease to the hook of the seat.
Align the seat hooks with the frame hooks and push the seat forward.

Push the seat down until it locks.

CAUTION

- Be careful not to pinch the wire harness between the seat and the frame.
- Be careful not to damage the rear fairing.

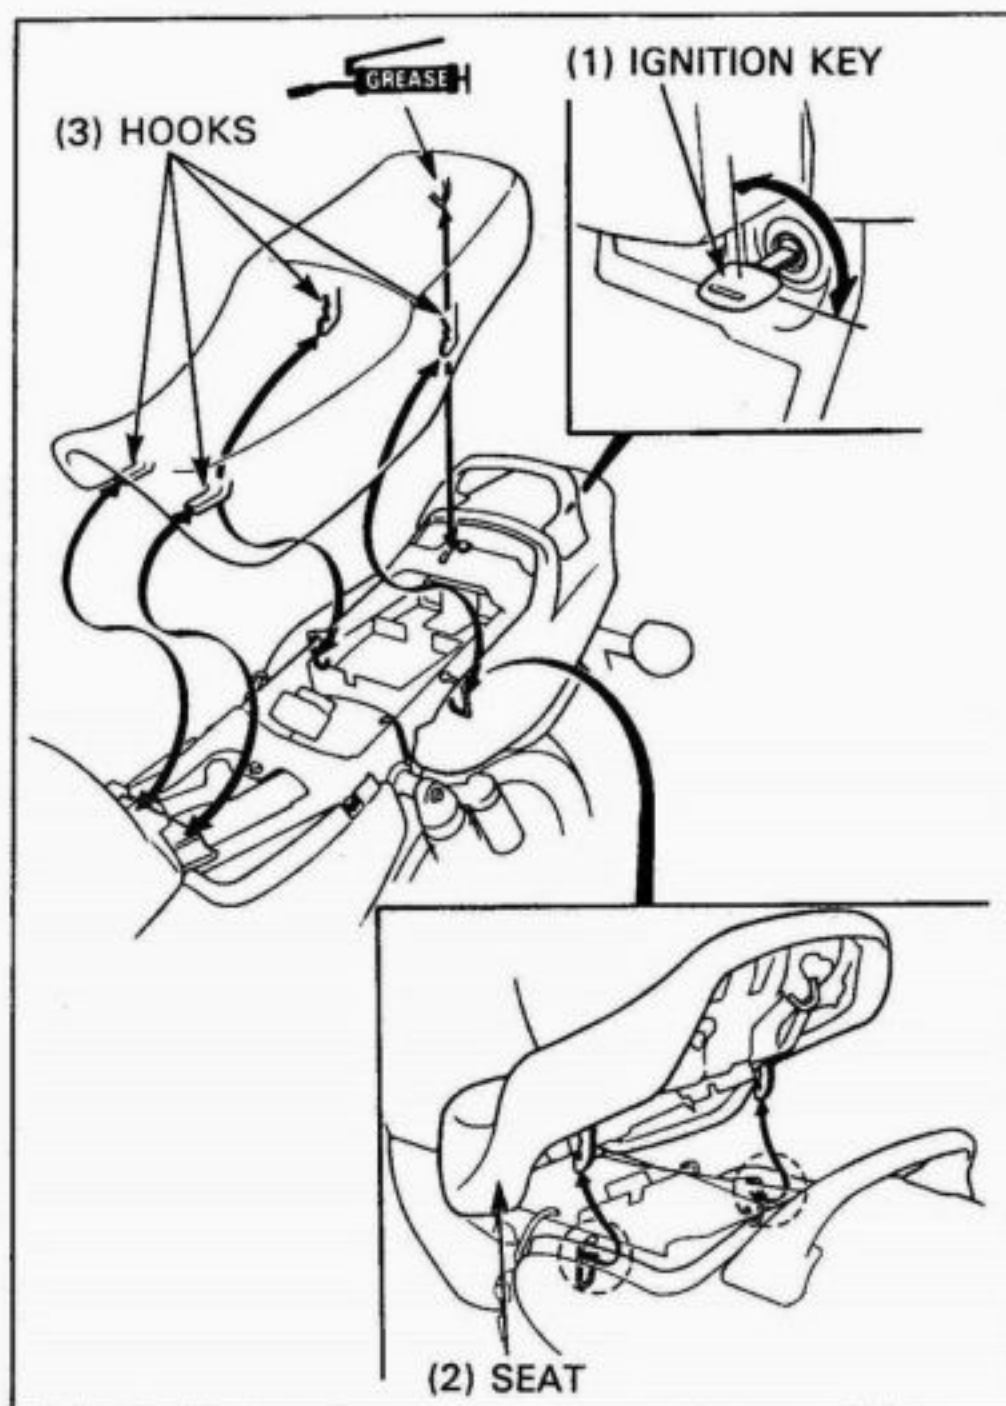

Side Cover Removal/Installation

Remove the seat (see above).

Remove the mounting screw.
Release the cover front bosses from the grommets and remove the side cover.

Install the side cover in the reverse order of removal.

