


Front Master Cylinder Disassembly/Assembly

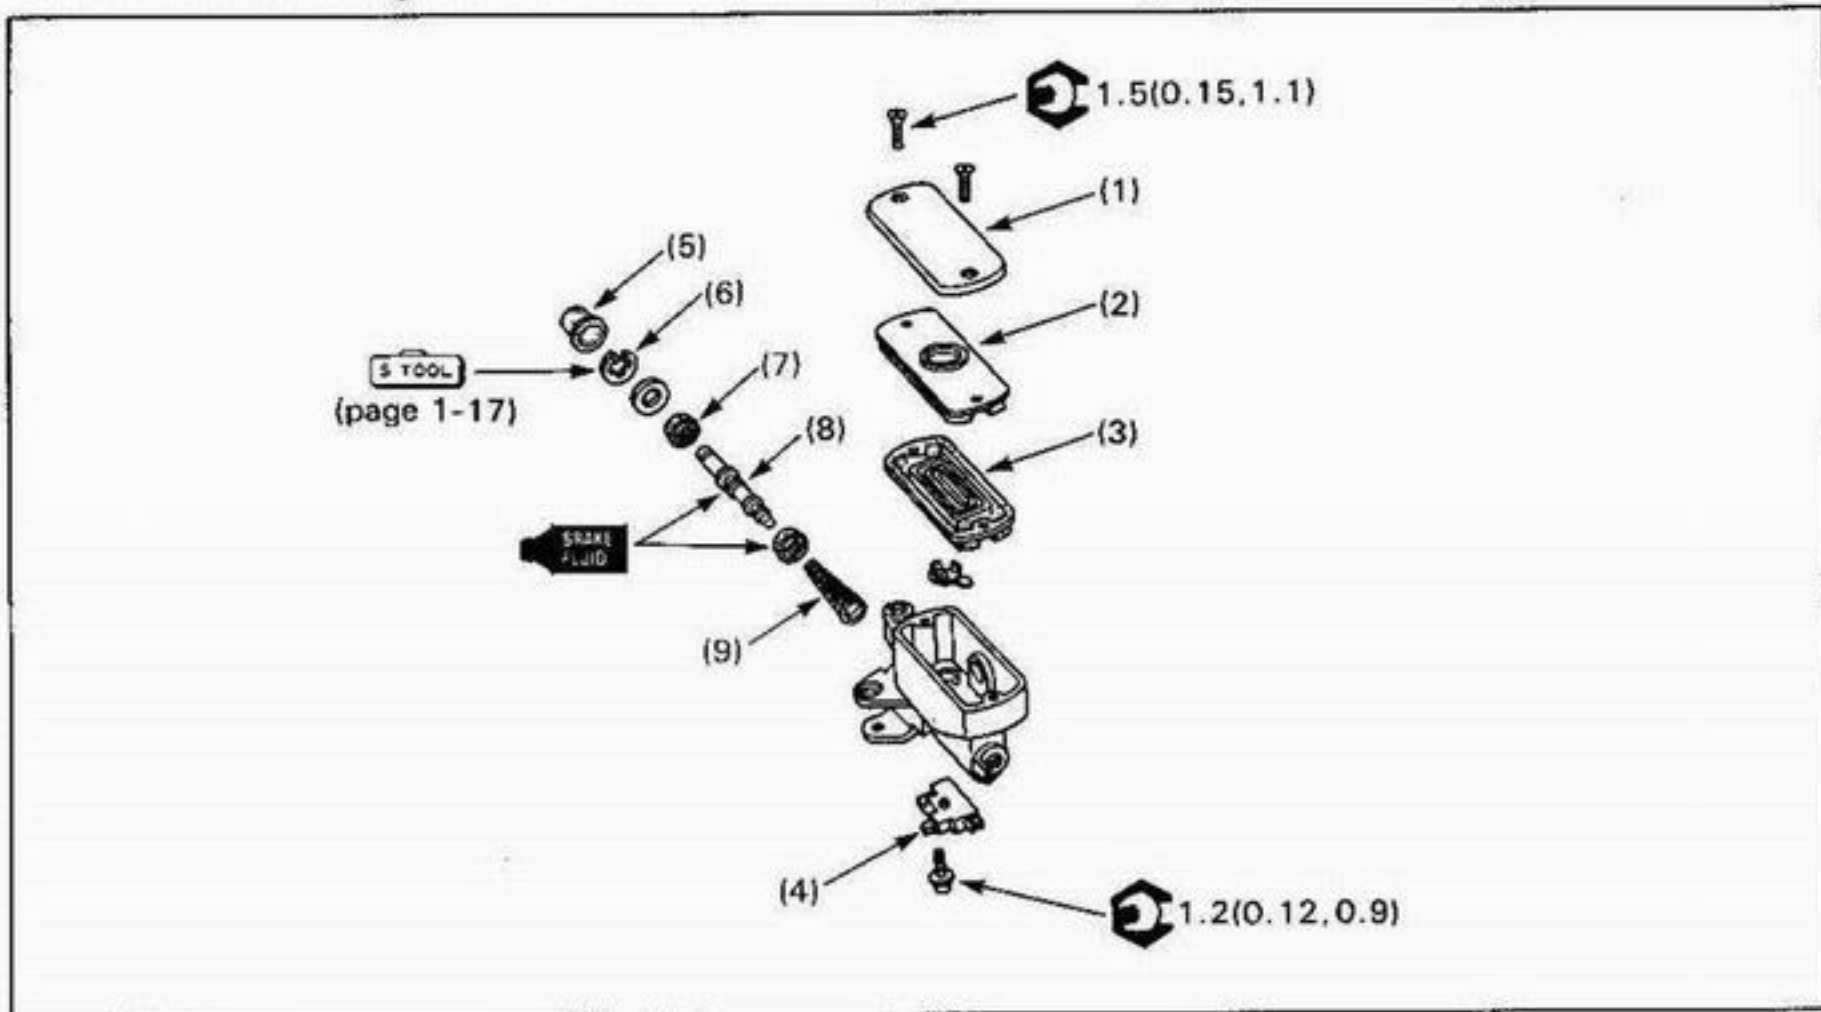

CAUTION

• Spilled brake fluid will damage painted, plastic or rubber parts. Cover these parts when servicing the brake system.

NOTE

• Replace the master piston, spring, cups, stopper plate, snap ring and boot as a set.
 • The master piston, cups and spring must be installed as a set.

Requisite Service

- Brake fluid replacement/air bleeding (section 17 of the Common Service Manual)
- Front master cylinder removal/installation (page 12-4)

Procedure	Qty	Remarks
Disassembly Order		Assembly is in the reverse order of disassembly.
(1) Reservoir cover	1	
(2) Diaphragm plate	1	
(3) Diaphragm	1	
(4) Front brake light switch	1	
(5) Boot	1	
(6) Snap ring	1	CAUTION • Be certain the snap ring is fully seated in the groove.
(7) Stopper plate	1	
(8) Master piston assembly	1	
(9) Spring	1	Install it with its small coil end toward the piston.