


Front Brake Caliper Disassembly/Assembly

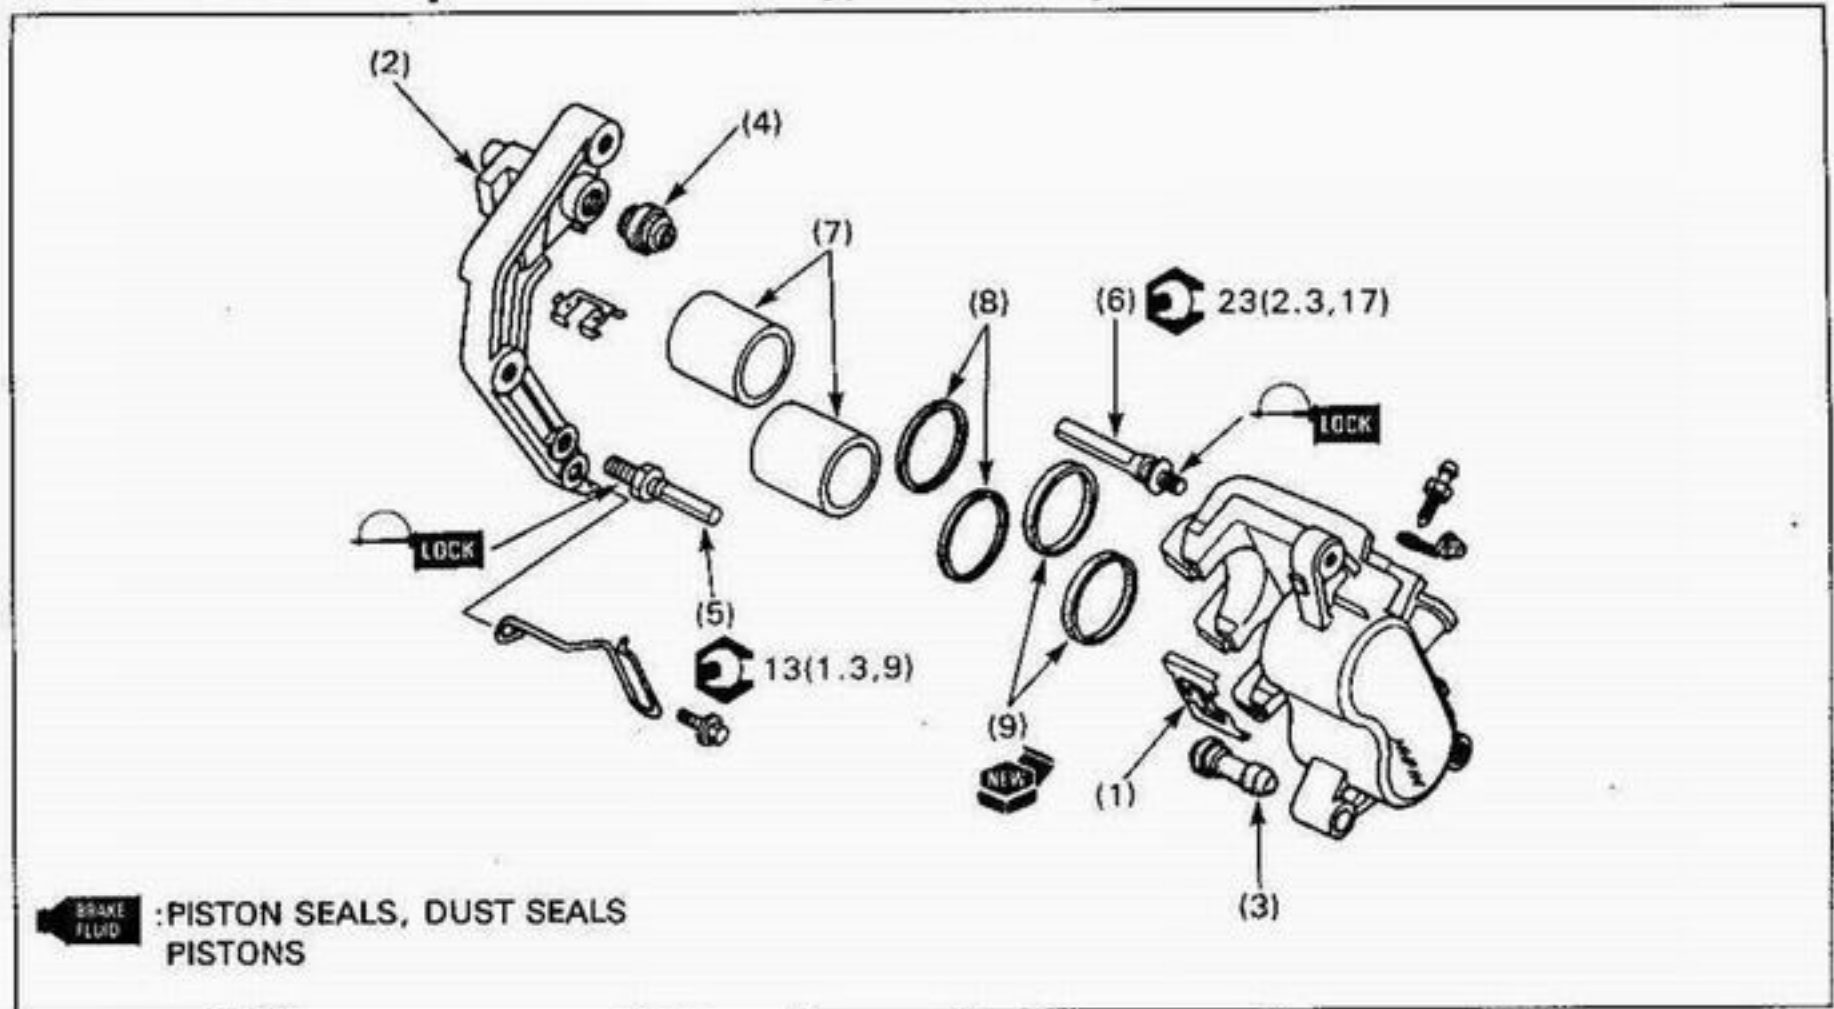

WARNING

• A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.

CAUTION

• Spilled brake fluid will damage painted, plastic or rubber parts. Cover these parts when servicing the brake system.

Requisite Service

- Brake pad removal/installation (page 12-2)
- Brake fluid replacement/air bleeding (section 17 of the Common Service Manual)
- Front brake caliper removal/installation (page 12-8)

Procedure	Qty	Remarks
Disassembly Order		Assembly is in the reverse order of disassembly. Note the spring direction as shown.
(1) Pad spring	1	
(2) Caliper bracket	1	
(3) Bracket pin bolt boot	1	
(4) Caliper pin bolt boot	1	Install into the bracket groove securely.
(5) Bracket pin bolt	1	Apply a locking agent to the threads before torquing. Apply silicone grease to the pin.
(6) Caliper pin bolt	1	
(7) Caliper piston	2	Install them with the concaved side away from the pads.
(8) Dust seal	2	CAUTION • Be careful not to damage the piston sliding surface when removing seals.
(9) Piston seal	2	