

Neutral Switch

Remove the drive sprocket cover and disconnect the neutral switch connector.

Check the switch for continuity between the Light green/Red wire terminal and ground first with the transmission in neutral and then with the transmission in any gear.

For neutral switch replacement, refer to page 8-10, 12.

