

# 18. Troubleshooting

Engine Does Not Start or is Hard To start	18-1	Poor Performance at High Speed	18-3
Engine Lacks Power	18-2	Poor Handling	18-4
Poor Performance At Low and Idle Speeds	18-3	Hydraulic Tappet	18-4

## Engine Does Not Start Or Is Hard To Start

