



## NUTS, BOLTS, FASTENERS

Check that all chassis nuts and bolts are tightened to correct torque values (page 1-5).

Check that all cotter pins, safety clips, hose clamps and cable stays are in place.

## WHEELS

### TIRE PRESSURE

NOTE

Tire pressure should be checked when tires are COLD.

Check the tires for cuts, imbedded nails, or other sharp objects.

Recommended tire pressures and tire sizes:

		Front	Rear
Tire size		110/90-16 59H	130/90-16 67H
Cold tire pressure kPa (kg/cm <sup>2</sup> )	Up to 90 kg (200 lbs) load	225 (2.25, 32)	225 (2.25, 32)
	90 kg (200 lbs) load to vehicle capacity load	225 (2.25, 32)	280 (2.8, 40)
Tire brand	BRIDGE-STONE	G511	G508
	DUNLOP	K527A	K627

Check the front and rear wheels for trueness (Refer to section 14, 15).

Measure the tread depth at the center of the tires. Replace the tires if the tread depth reaches the following limit:

Minimum tread depth:

- Front: 1.5 mm (1/16 in)
- Rear: 2.0 mm (3/32 in)

## STEERING HEAD BEARINGS

NOTE

Check that the control cables do not interfere with handlebar rotation.

Raise the front wheel off the ground.

Check that the handlebar moves freely from side to side. If the handlebar moves unevenly, binds, or has abnormal movement, inspect the steering head bearings (Section 14).

