




Loosen the cam chain by pushing the tensioner lock pin down and pulling the lock plate up as shown. Remove the cam sprockets from the camshaft flange shoulders.

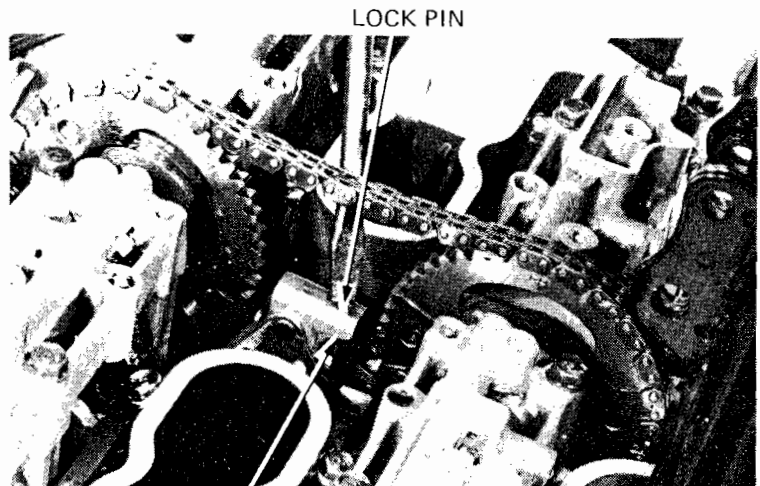


LOCK PLATE

Remove the cam chain from the sprockets. Remove the camshaft holder bolts and the holders.


NOTE

Loosen the holder bolts in 2-3 steps in criss-cross pattern.

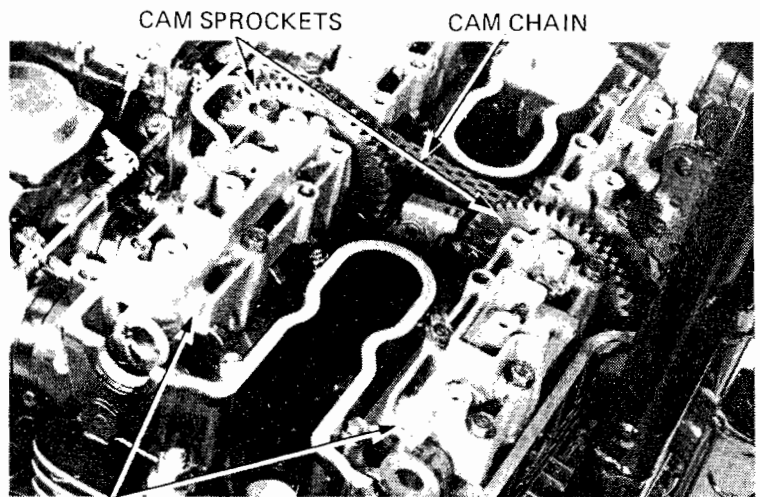

CAMSHAFT HOLDERS

Remove the camshafts and sprockets.

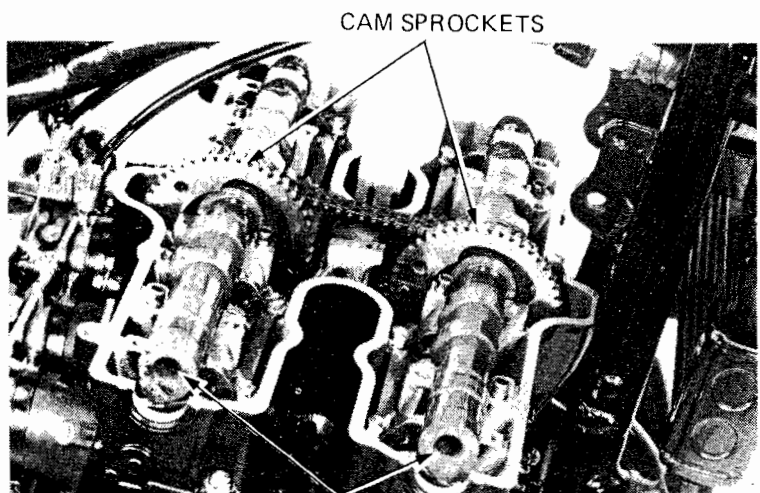

CAMSHAFTS