




## UNIVERSAL JOINT

### REMOVAL/INSTALLATION


Remove the swing arm (Page 15-16).  
Remove the universal joint from the engine output shaft.

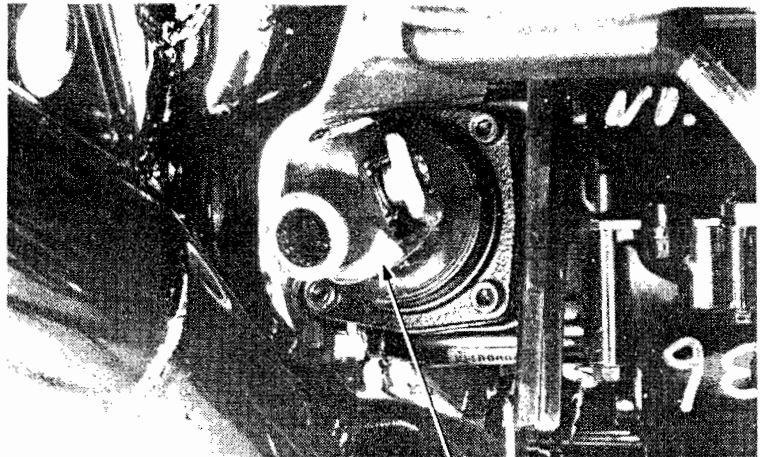

UNIVERSAL JOINT

Check the universal joint and drive shaft splines for wear or damage.  
Inspect the universal joint bearings for excessive play or damage.  
Apply molybdenum disulfide grease to the splines and install the universal joint.

UNIVERSAL JOINT

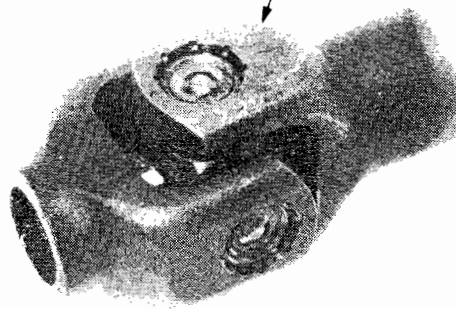

DRIVE SHAFT

